



# E01 FAN COVER - SHROUD

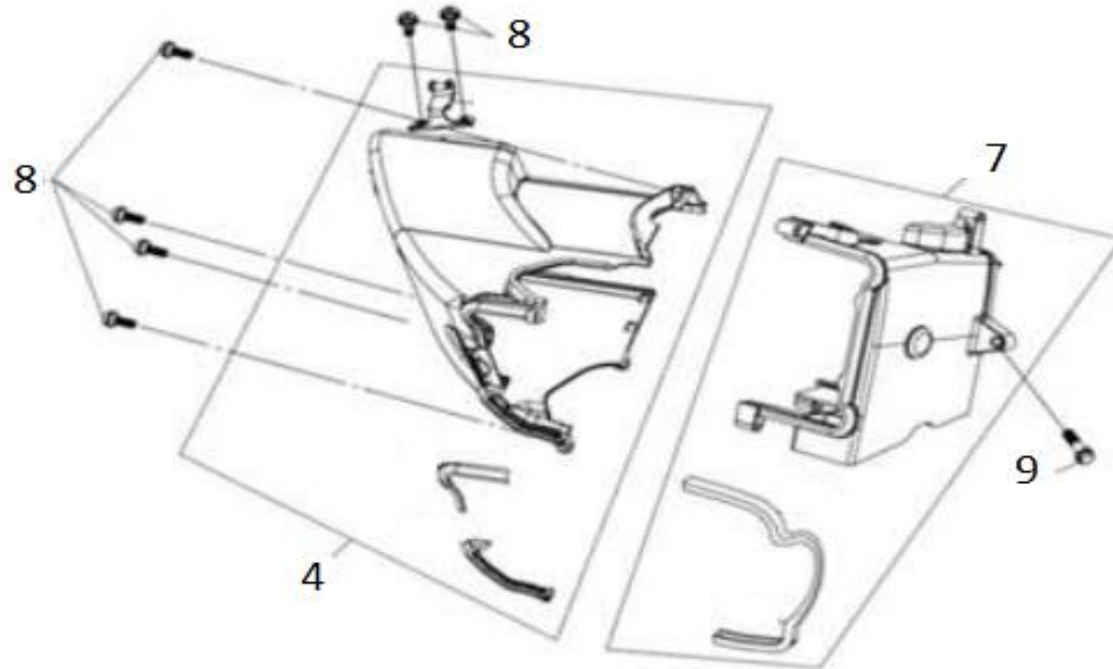


No.	Part No.	Description	Qty	Remark
4	1962A-F6K-0003-L1	Shroud A Ass'y	1	
7	1963A-VJ3-0000	Shroud B Assy.	1	
8	93904-35380	Tapping Screw 5*16	6	
9	96001-06028-08	Sh. Flange Bolt 6*28	1	

## E02 CYLINDER HEAD

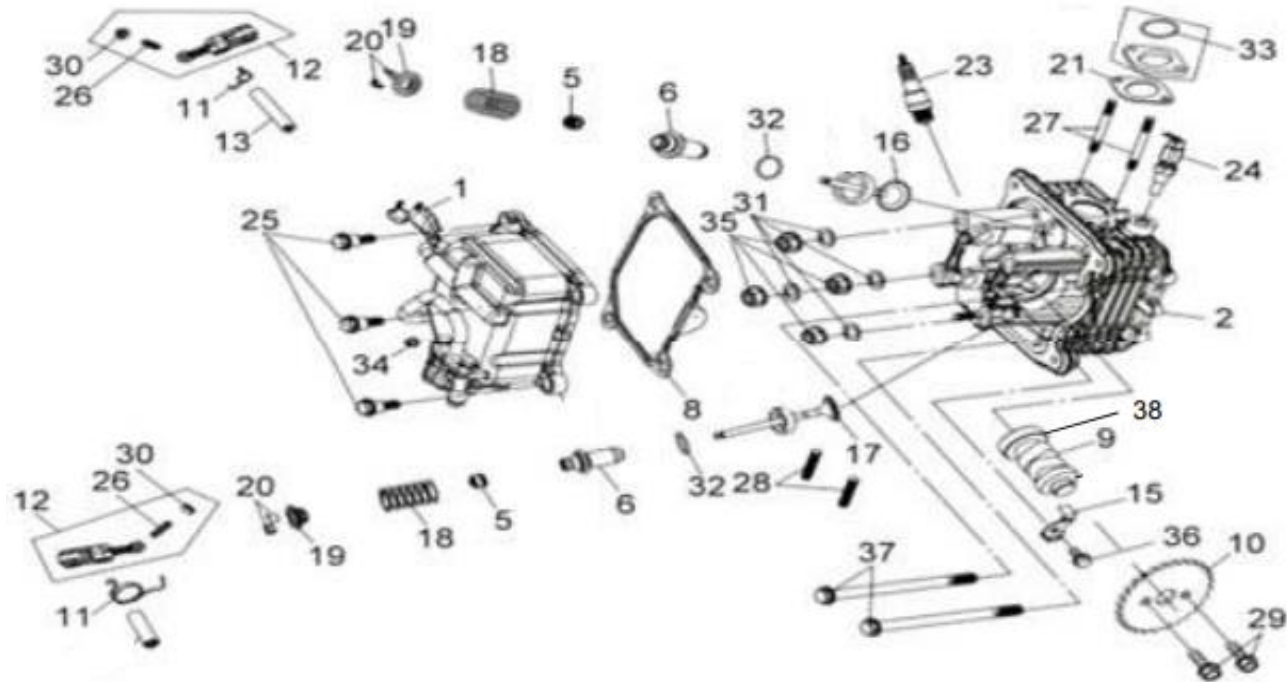


No.	Part No.	Description	Qty	Remark
1	11832-VJ3-0001	Hitension Cord Clamp.	1	
2	12200-VJ3-0003	Cylinder Head Comp.	1	
5	12209-H6B-0000	Valve Stem Seal	2	
6	12237-F6A-3000	Inlet Valve Guide	2	
8	12391-F8A-0001	Head Cover Packing	1	
9	14100-VJ3-0003	Cam Shaft Comp.	1	
10	14105-F6A-0000-CN1-V	Cam Sprocket	1	
11	14439-VJ3-0000	Rocker Arm Torsion Spring	2	
12	1443A-VJ3-0000	Valve Rocker Arm Assy.	2	
13	14451-F8A-0000-L1	In. Rocker Arm Shaft	1	
15	14457-F8A-0000-L1	Cam Shaft Setting Plate	1	
16	14711-VJ3-0000	In. Valve	1	
17	14721-VJ3-0000	Exh. Valve	1	
18	14751-ARA-9000-L1	Valve Spring	2	
19	14771-F6A-0001	Retainer Valve Spring	2	
20	14781-M9Q-0000	Valve Cotter	4	

## E02 CYLINDER HEAD

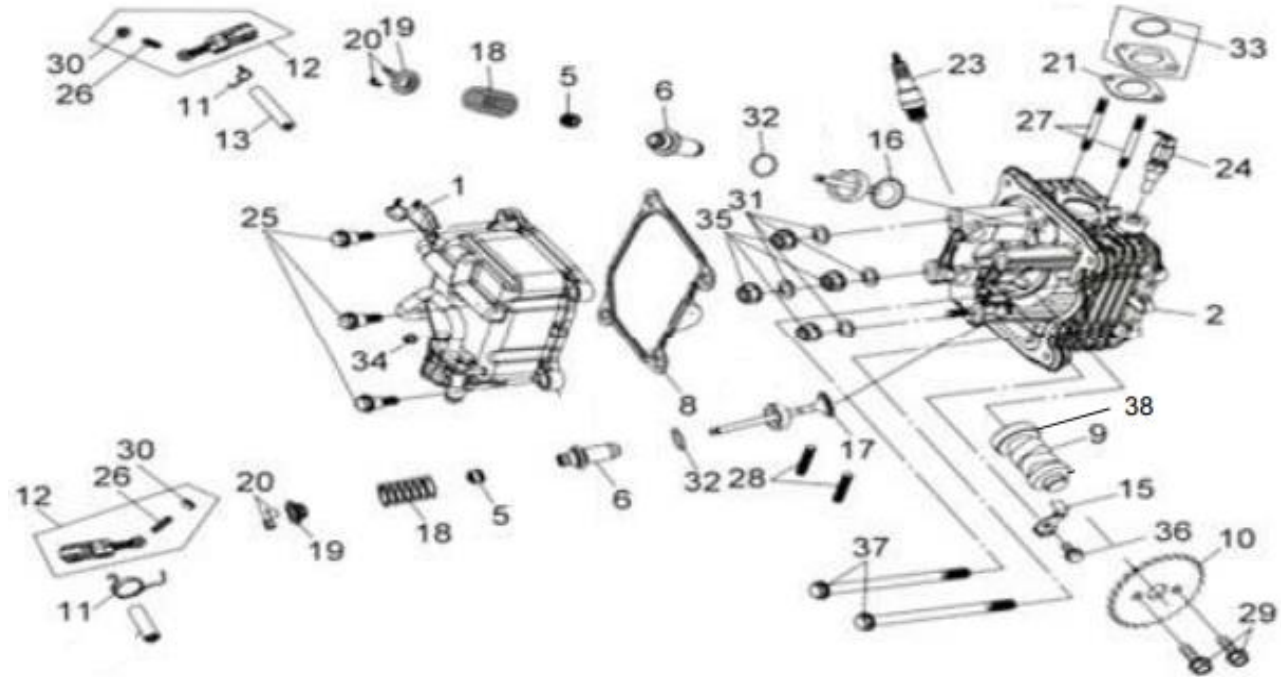


No.	Part No.	Description	Qty	Remark
21	16201-M92-0000	Carb.Insulator Gasket	1	
23	AC-1PCR7HSA-3	Plug. Spark (NGK CR7HSA)	1	
24	37880-A5L-0000	Eng Temperature Sensor	1	
25	90002-HMA-0001	Head Cover Bolt	4	
26	90012-M9Q-000	Tappet Adjusting Screw	2	
27	90033-M92-0000	Stud Bolt 6*55	2	
28	90034-HMA-0001	Special Stud Bolt 8*40	2	
29	90083-B12-000	Knock Bolt 6mm	2	
30	90206-HLK-000	Tappet Adjusting Screw Nut	2	
31	90442-M8Q-0000	Sealing Washer 8mm	4	
32	91305-M9Q-000	O-Ring 9 x 16	2	
33	91308-M9Q-0000	O-Ring 27*2.0	1	
34	94050-06000	Flange Nut 6mm	1	
35	94050-08000	Flange Nut 8mm	1	
36	96001-06012-00	Sh. Flange Bolt 6*12	1	
37	96001-06095-08	Sh. Flange Bolt 6x95	2	
38	96100-62033-10-VN	Radial Ball BRG. 6203	1	

# E03 FUEL INJECTOR A'SSY

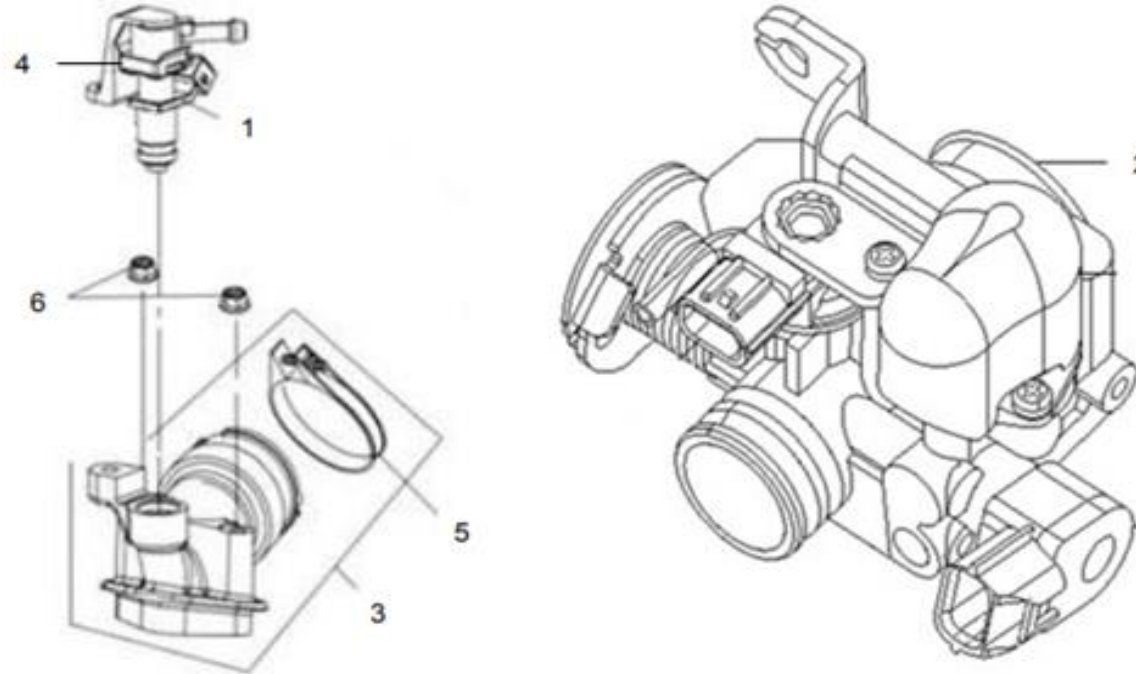


No.	Part No.	Description	Qty	Remark
1	06414-F6K-0000	Fuel Injector	1	
2	16401-VJ3-0000	Throttle Body Ass'y	1	
3	1711A-VJ3-0001	Inlet Pipe Ass'y.	1	
4	17120-F6K-0001	Fuel Injector Cap	1	
5	90652-G03-000	Insulator Band 40mm	1	
6	94050-06000	Flange Nut 6mm	2	
	3210A-VJ4-0000	T.P.S Sub Cord	1	

## E04 CYLINDER - CAM CHAIN

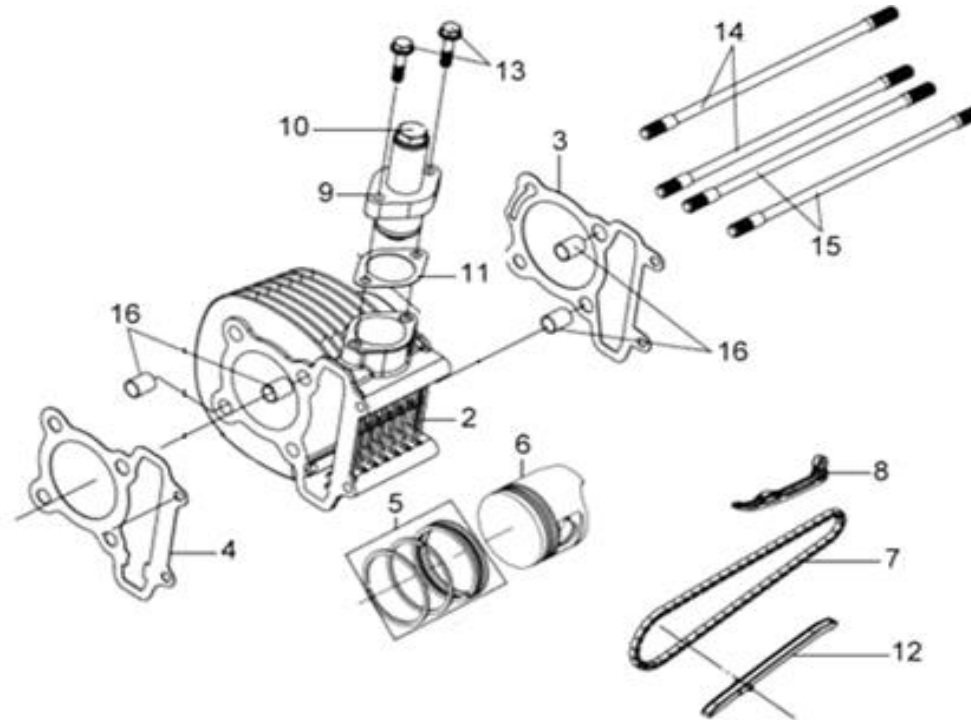


No.	Part No.	Description	Qty	Remark
2	12100-VVB-0002	Cylinder Comp	1	
3	12191-VSF-0000	Cylinder Gasket	1	
4	12251-H6B-0002	Cylinder Head Gasket	1	
5	13010-ADB-0000	Piston Ring Set	1	
6	13101-VJ3-0000	Piston	1	
7	1CD SCR X 94L	Cam Chain	1	
8	14510-F8A-0001-L1	Cam Chain Tensioner	1	
9	14520-M9Q-0000	Tensioner Lifter Ass'y	1	
10	90005-M9Q-0000	Pan Screw 6*6	1	
11	14523-M92-0001	Tensioner Lifter Gasket	1	
12	14610-F8A-0001-L1	Cam Chain Guide	1	
13	90001-M9Q-0000	Sh Flange Bolt 6*22	2	
14	90031-F8A-0001	Cylinder Stud Bolt A	2	
15	90032-M92-3000	Cylinder Stud Bolt B	2	
16	90703-M8Q-000	Dowel Pin 10*14	4	

# E05 CRANK SHAFT

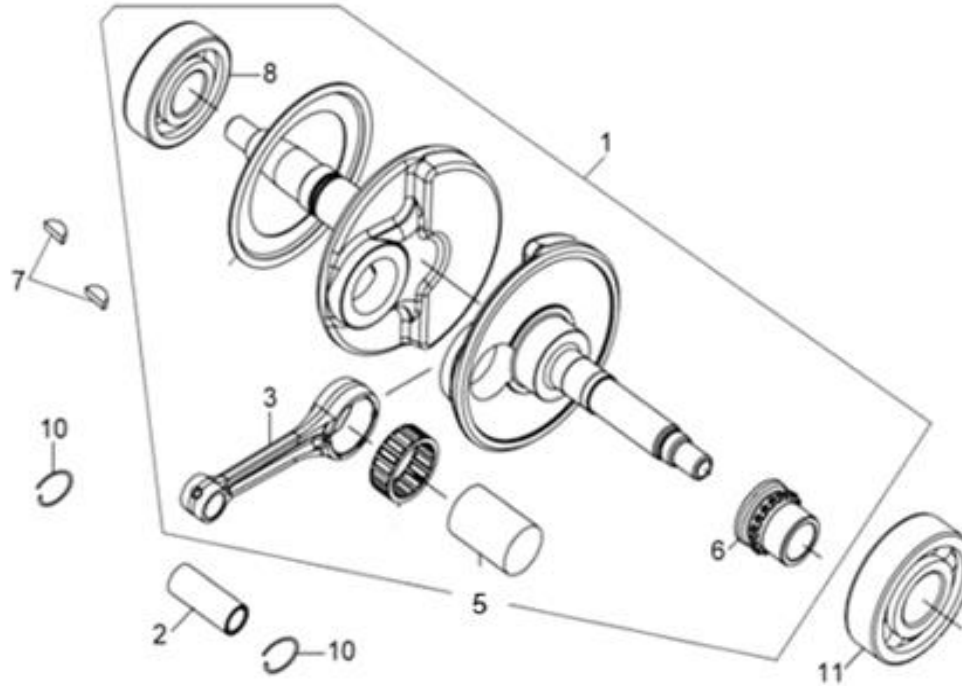


No.	Part No.	Description	Qty	Remark
1	13000-VJ3-0000	Crank Shaft Comp.	1	
2	13111-M9Q-0000	Piston Pin	1	
3	13201-VJ1-0000	Connecting Rod	1	
5	13381-M92-3004-L1	Crank Pin	1	
6	14311-VJ3-0000	Timing Sprocket	1	
7	90701-HB6-0100	Woodruff Key 25*14*4	2	
8	91001-H6B-300	Radial Ball Brg. 63/22	1	
10	94601-15000	Piston Pin Clip 15mm	2	
11	96100-62073-00	Radial Ball Bearing. 6207	1	

# E06 GENERATOR

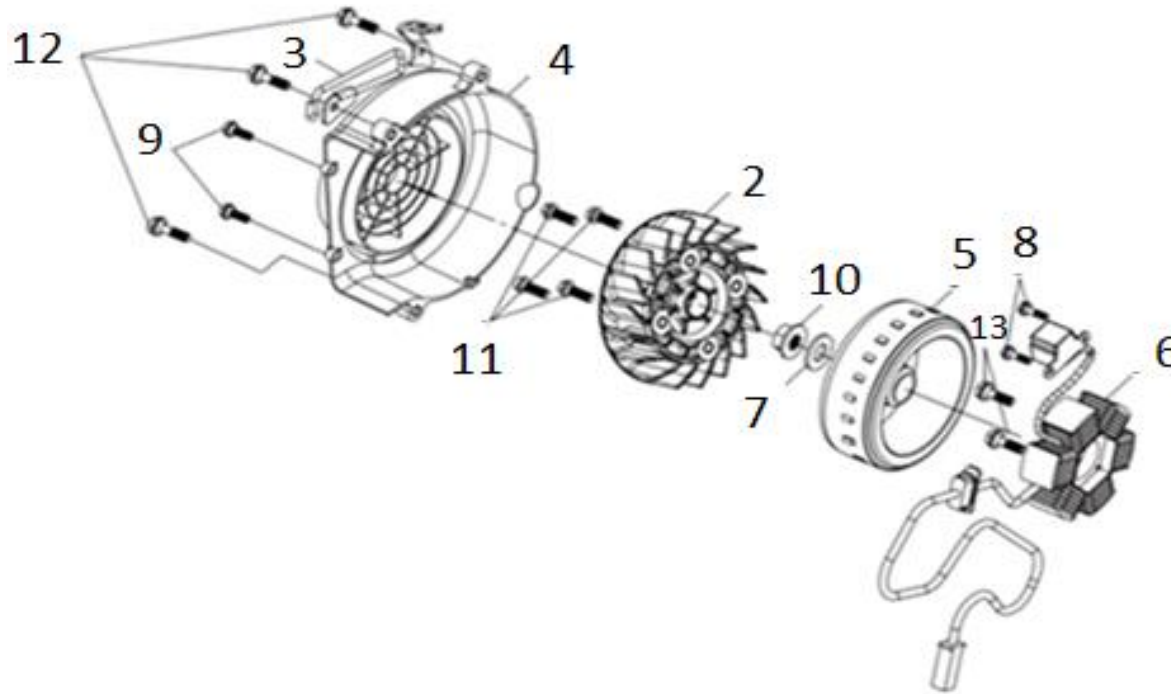

No.	Part No.	Description	Qty	Remark
2	19510-VT3-0001	Cooling Fan Comp.	1	
3	19613-F8A-0003-L1	Start. Motor Cord Clamper	1	
4	19610-VJ3-0000	Fan Cover Comp	1	
5	31110-F6K-0000	Flywheel Comp	1	
6	31120-VJ3-0002	Stator Comp	1	
7	90440-M9Q-0000	Plain Washer 12mm	1	
8	92101-05012-0A	Hex Bolt 5x12	2	
9	93904-35380-00	Tapping Screw 5*16	2	
10	94050-12000	Flange Nut 12 mm	1	
11	95701-06018-07	Flange Bolt 6x18	4	
12	96001-06025-07	Sh. Flange Bolt 6*25	4	
13	96001-06028-07	Sh. Flange Bolt 6x28	3	


## E07 OIL PUMP - R. CRANK CASE

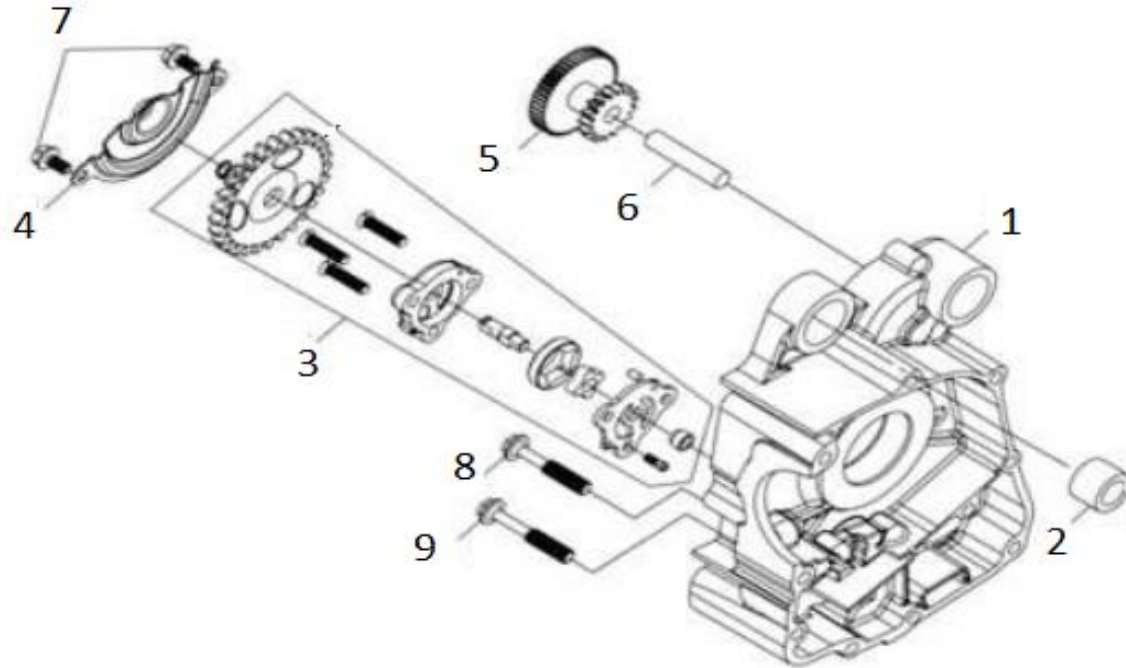

No.	Part No.	Description	Qty	Remark
1	11100-VJ3-0001-SP	R. Crank Case Comp.	1	
2	11102-M9Q-3000-L1	Eng. Hanger Rubber Bush	1	
3	15100-F6A-0006-L1	Oil Pump Assy.	1	
4	15711-M92-0000	Oil Pump Separator	1	
5	28101-M9Q-0000	Starter Reduction Gear	1	
6	28102-M9Q-0000	Start. Red. Gear Shaft	1	
7	96001-06012-08	Flange Bolt Sh. 6*12	2	
8	96001-06045-08	Flange Bolt Sh. 6*45	1	
9	96001-06055-08	Flange Bolt Sh. 6*55	1	




# E08 RIGHT CRANK CASE COVER

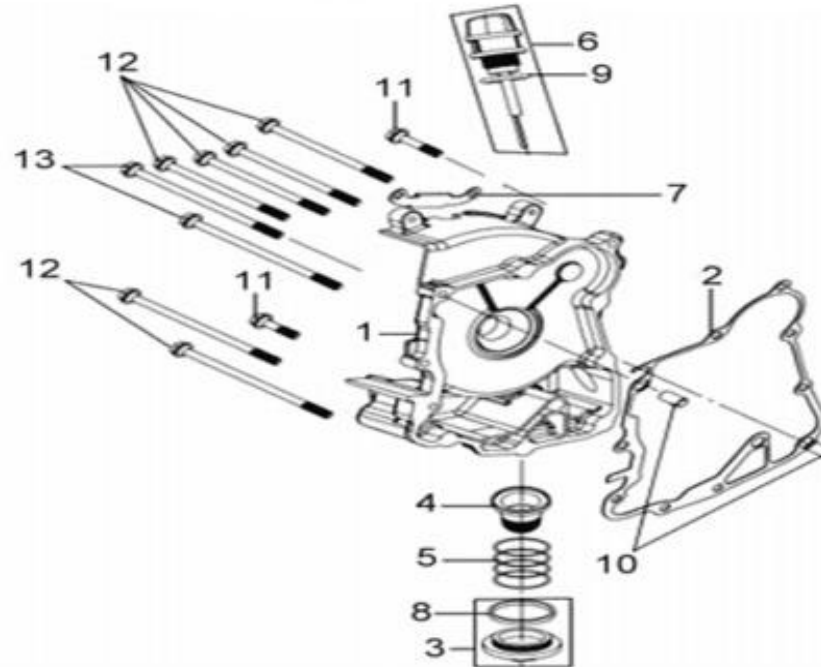


No.	Part No.	Description	Qty	Remark
1	11331-VJ3-0004-SP	R. Crank Case Cover	1	
2	11394-VJ3-0000	R. Cover Gasket	1	
3	1236A-M9T-000	Tappet Adjusting Hole Cap Ass'y	1	
4	15421-H66-0000-VN	Oil Filter Screen	1	
5	15426-M9Q-000	Oil Filter Screen Spg.	1	
6	1565A-VJ3-0001	Oil Level Gauge Ass'y.	1	
7	32961-F6A-0001-L1	A.C.G. Cord Clamp	1	
8	91302-M9Q-000	O-Ring 30.8mm	1	
9	91307-M9Q-0000	O-Ring 18x3	1	
10	94301-08140-00	Dowel Pin 8x14	2	
11	96001-06030-08	Sh. Flange Bolt 6x30	2	
12	96001-06095-08	Sh. Flange Bolt 6x95	6	
13	96001-06100-08	Sh. Flange Bolt 6x100	2	

# E09 L. CRANK CASE

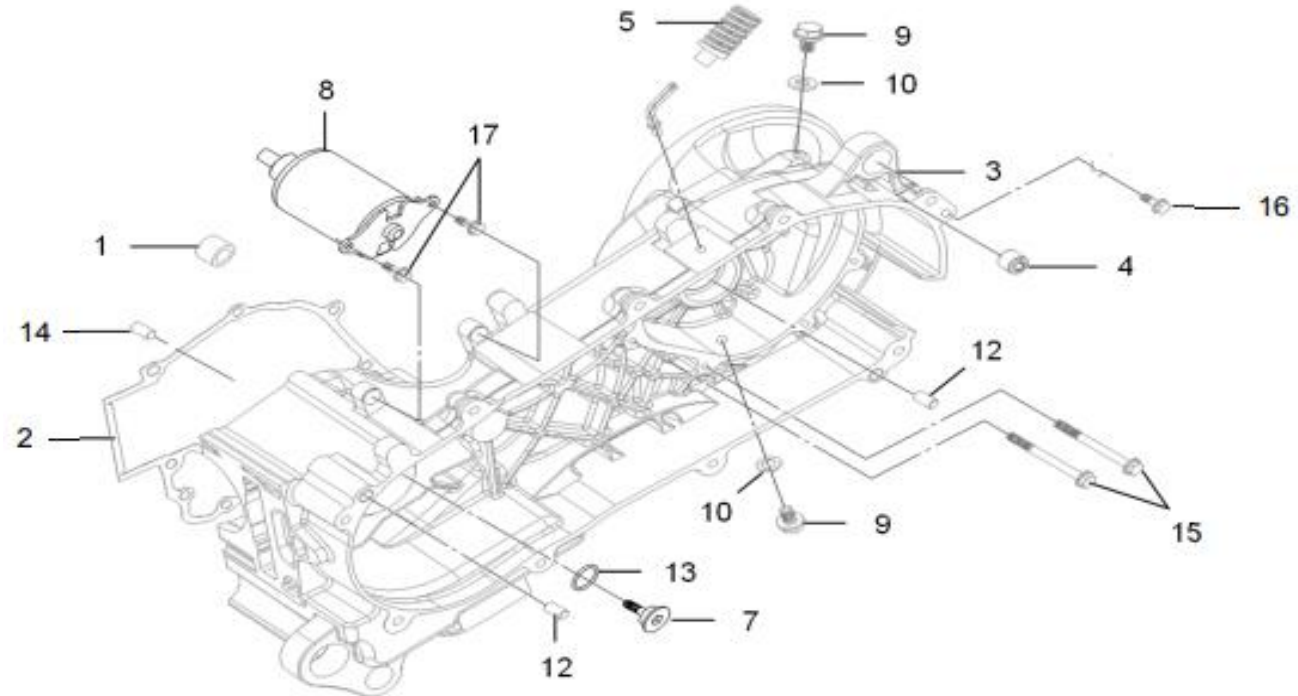


No.	Part No.	Description	Qty	Remark
1	11102-M9Q-3000-L1	Eng. Hanger Rubber Bush	1	
2	11192-VJ3-0000	R. Crank Case Gasket	1	
3	11200-VJ3-0002-SP	L. Crank Case Comp.	1	
4	11203-M9Q-3000-VN	Rr. Cush. Un. Rubber Bush	1	
5	11221-VWA-0000	Mission Breather Tube	1	
7	14531-M9Q-000	Cam Chain Tensioner Pivot	1	
8	31200-VJ3-0001	Start Motor Ass'y	1	
9	90103-M9Q-0000-L1	Special Bolt 8mm	2	
10	90474-M9Q-0000	Washer 8mm	2	
12	90703-M8Q-000	Dowel Pin 10*14	2	
13	91304-M9Q-000	O-Ring 15.2*1.5	1	
14	94301-08140-00	Dowel Pin 8x14	2	
15	95801-06040-07	Sh. Flange Bolt 6x40	2	
16	96001-06012-08	Sh. Flange Bolt 6X12	1	
17	96001-06016-08	Sh. Flange Bolt 6x16	2	

# E10 LEFT CRANK CASE

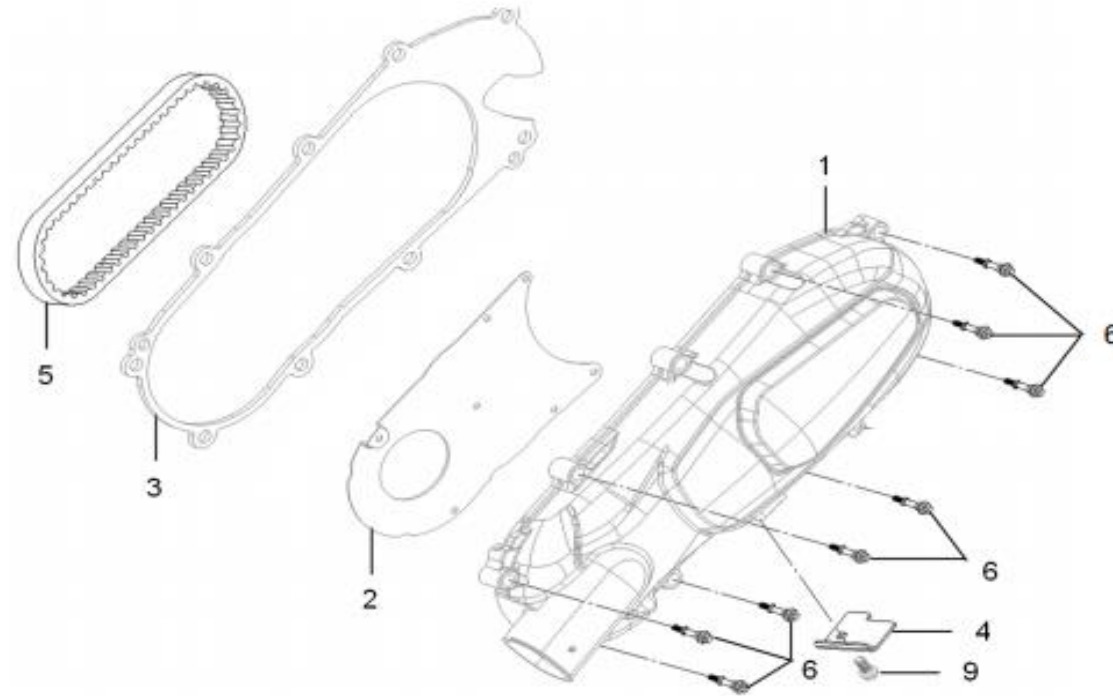


No.	Part No.	Description	Qty	Remark
1	11341-VJ3-0002-IC	L. Crank Case Cover	1	
2	11342-VJ3-0001	L.Side Cover Plate	1	
3	11395-VJ3-0001	L. Cover Gasket	1	
4	11832-VJ3-0001	Left Cover Stay	1	
5	23100-F6A-0003	Drive Belt	1	
6	9000B-M9Q-000	Sh. Flange Bolt 6*35	9	
9	96001-06012-08	Sh. Flange Bolt 6X12	1	

## E11 DRIVEN FACE

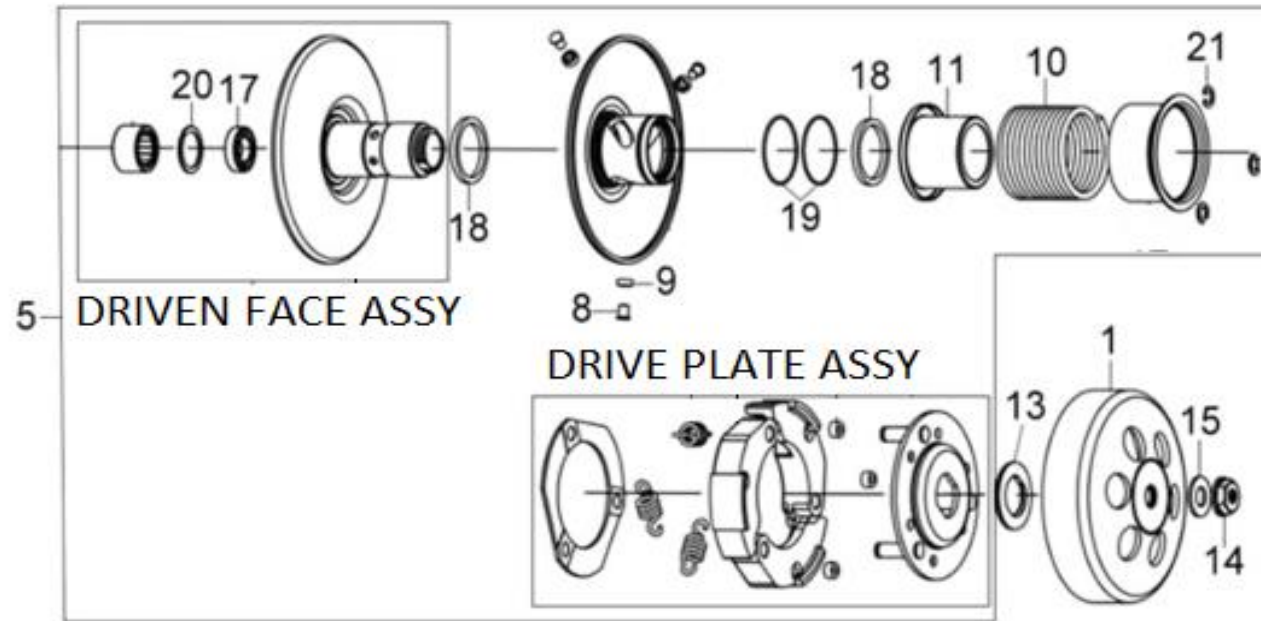


No.	Part No.	Description	Qty	Remark
1	22101-M9Q-000	Clutch Outer	1	
5	23010-VJ3-0002	Driven Pulley Ass'y.	1	
8	23225-M9Q-000	Roller Guide Pin	3	
9	23226-M9Q-000	Guide Roller	3	
10	23233-M9Q-000	Driven Face Spring	1	
11	23237-M9Q-000	Seal Collar	1	
13	90202-M9Q-000	Special Nut 28mm	1	
14	94050-12000	Flange Nut 12mm	1	
15	90440-M9Q-0000	Plain Washer 12mm	1	
17	91002-H6B-3001	Rad. Ball Brg. 6902LUC3	1	
18	91211-M8Q-000	Driven Face Seal 34*41*4	1	
19	91384-M9Q-000	O-Ring 38.8*1.9	2	
20	94520-28000	Cir-clip 28mm	1	
21	90605-166-720	E-ring 7mm	3	

# E12 DRIVE FACE

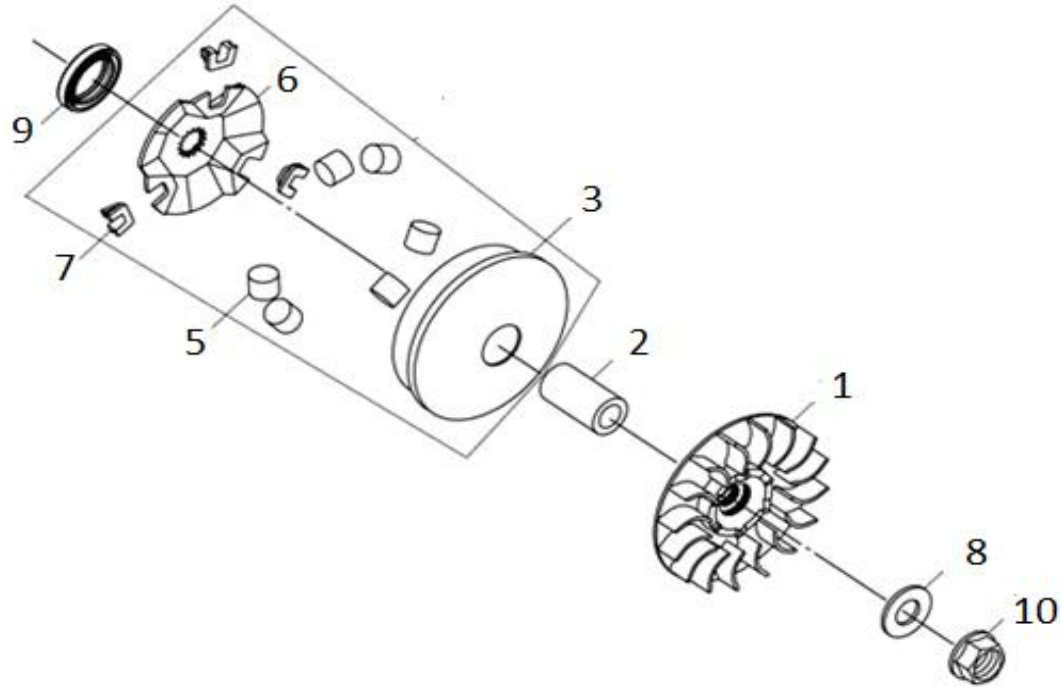


No.	Part No.	Description	Qty	Remark
1	22102-VT1-0001	Drive Face Comp.	1	provide while stock last
2	22105-M92-000	Drive Face Boss	1	
3	22110-M92-0002	Movable Drive Face Comp.	1	
5	22121-KAA-0000-M1	Weight Roller Comp.	6	
6	22131-VT2-0000	Ramp Plate	1	
7	22132-VT2-0000	Slide Piece	3	
8	90440-M9Q-0000	Plain Washer 12mm	1	
9	91202-FFA-9000	Oil Seal 27*47*7	1	
10	94050-12000	Flange Nut 12 mm	1	

# E13 TRANSMISSION

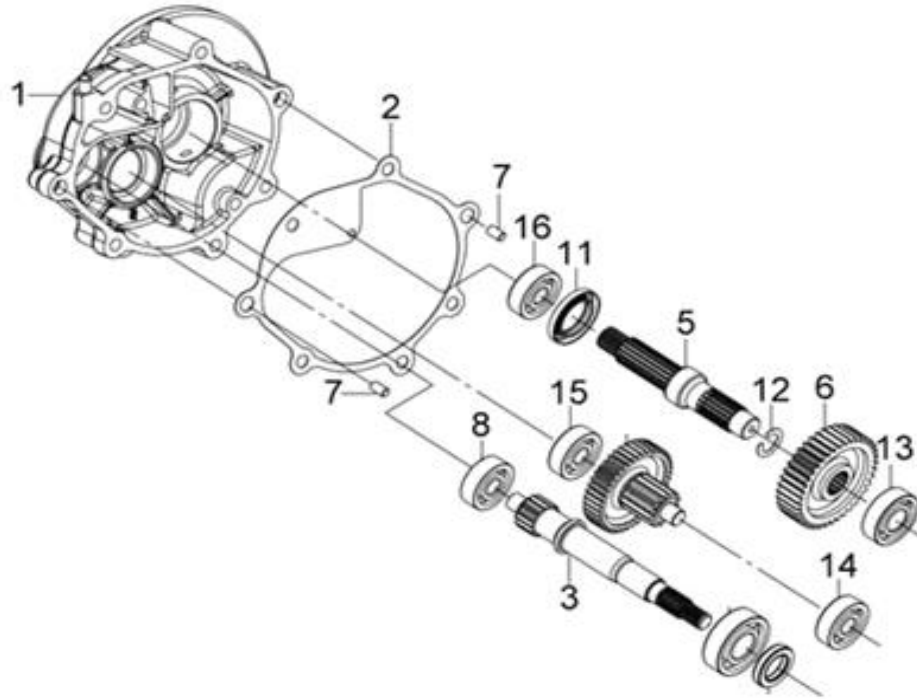


No.	Part No.	Description	Qty	Remark
1	21200-VJ3-0001-SP	Mission Case Comp.	1	
2	21395-VJ3-0001	Mission Case Gasket	1	
3	23411-VJ3-0001	Drive Shaft	1	
5	23431-VJ3-0000	Final Shaft	X	Please Order 23430-VJ3-0000
6	23432-VJ3-0000	Final Gear	X	Please Order 23430-VJ3-0000
	23430-VJ3-0000	Final Shaft Comp	1	23431-VJ3-0000 (item E13-5) + 23432-VJ3-0000 (item E13-6)
7	90703-M8Q-000	Dowel Pin 10x14	2	
8	91003-KS4-0030-M2	Radial Ball Brg. CSB301	1	
11	91255-M9Q-3000	Oil Seal 27*42*7	1	
12	94510-20000	Ex. Circle Clip 20mm	1	
13	96100-62033-10-VN	Radial Ball Bearing 6203	1	
14	96100-63013-00	Radial Ball Bearing 6301	1	
15	96100-63013-00	Radial Ball Bearing 6301	1	
16	96150-60043-10	Radial Ball Bearing 6004	1	

## E14 STARTING CLUTCH A'SSY

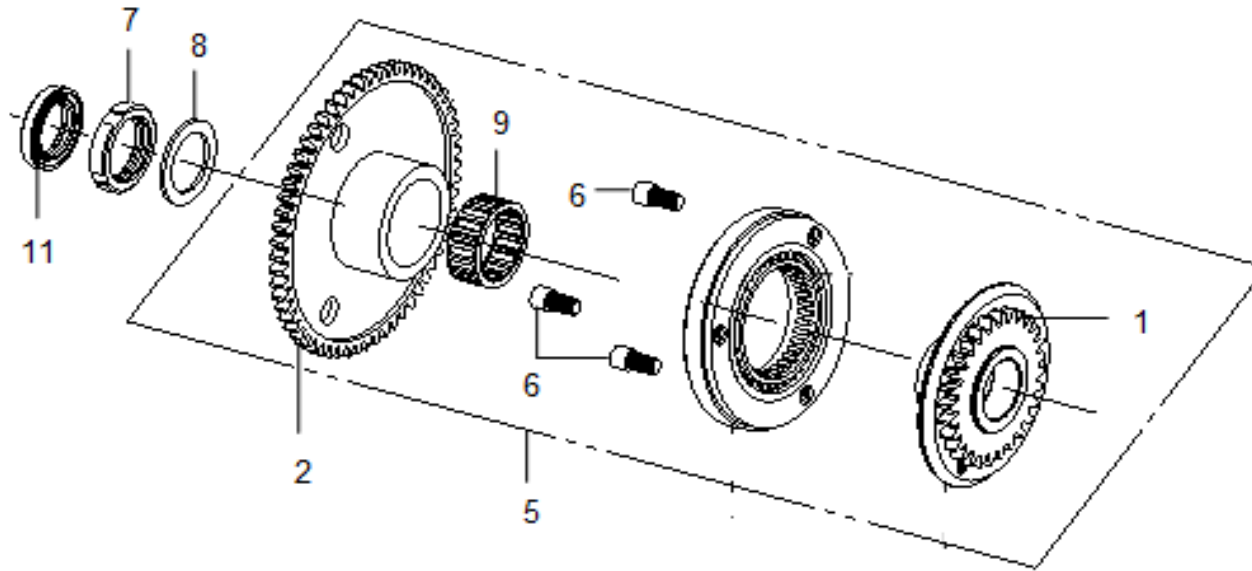

No.	Part No.	Description	Qty	Remark
1	15131-M92-3002	Oil Pump Drive Gear	1	
2	28110-VVC-000	Starting Clutch Gear Comp.	1	
5	2812B-VTB-0002-VN	Starting Clutch Comp Set	1	
6	90002-VUA-0100-M1	Socket Bolt 6x10	3	
7	90201-M9Q-000	Lock Nut 22 mm	1	
8	90403-M92-0000	Thrust Washer 22.2x31x1.5	1	
9	91104-M9Q-000	Needle Bearing 28x32x17	1	
12	91201-M9B-3000	Oil Seal 19.8x30x5	1	


# E15 A. I. S. V. A'SSY

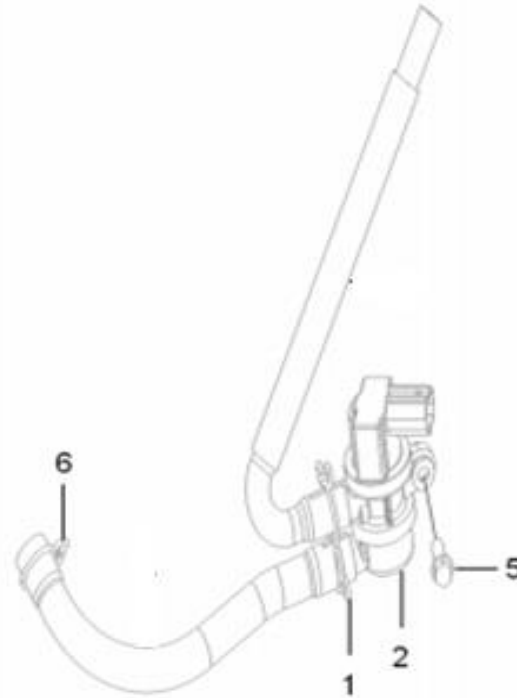

No.	Part No.	Description	Qty	Remark
1	18533-M7Q-0000	Air Hose Clip 19	2	
2	18650-F6K-0001	A.I.S.V. Assy.	1	
5	93401-05020-0H-L1	Hex. Bolt 5*20mm	1	
6	95002-80000	Tube Clip C12	1	




# F01 HEAD LIGHT-SPEEDOMETER

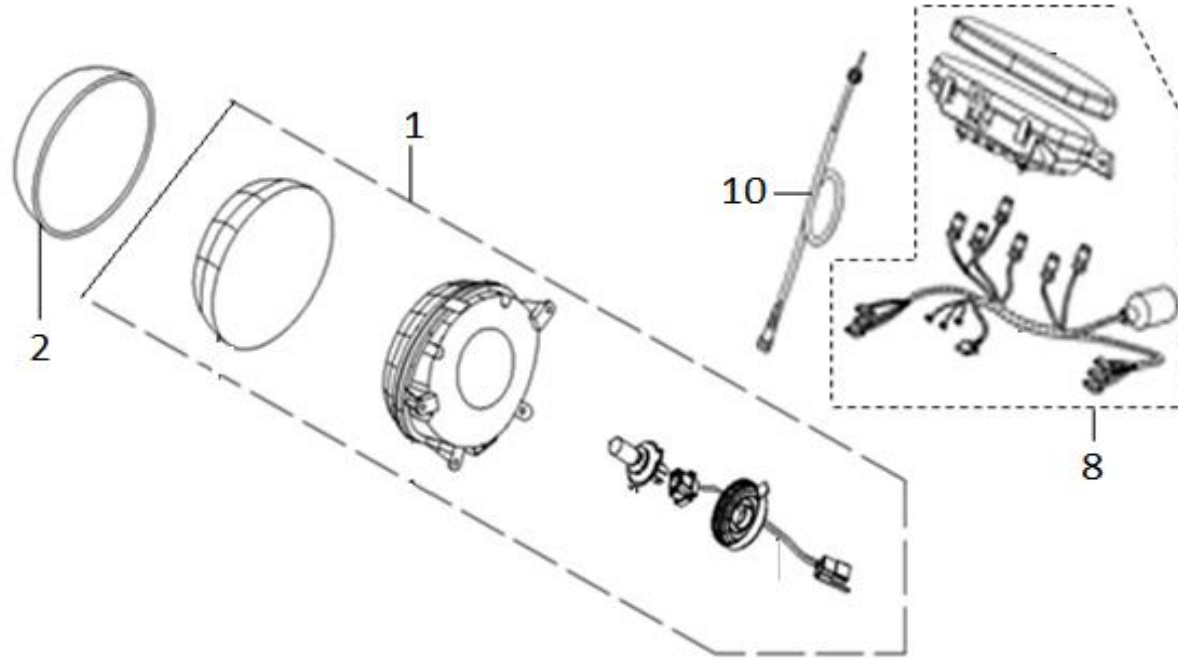


No.	Part No.	Description	Qty	Remark
1	33100-VJ3-0001	Head Light Ass'y	1	
2	33101-VJ3-0000	Head Light Rim	1	
8	37200-VJ4-0005	Speedometer Ass'y	1	
10	44830-VJ3-0000	Speedometer Cable Comp.	1	

## F02 CABLE-HANDLE LEVER

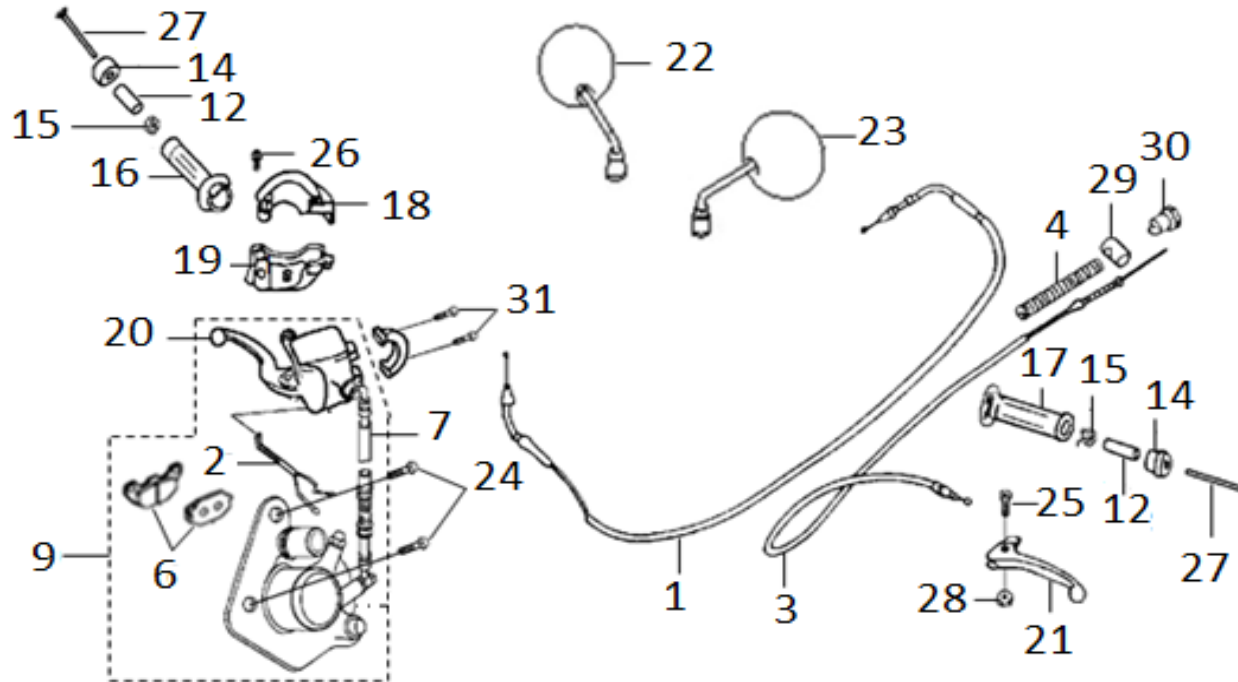


No.	Part No.	Description	Qty	Remark
1	17910-VJ3-0001	Throttle Cable Comp.	1	
2	35340-A5Z-0000	Fr. Stop Switch Ass'y	1	
3	43450-VJ3-0001	Rr. Brake Cable Comp.	1	
4	43472-T5C-0000	Rr. Brake Return Spring	1	
6	45105-H7C-0000-LC	Pad Comp. A +B	1	
7	45126-VJ4-0000	Fr. Brake Hose Comp	1	
9	4550A-VJ4-0000	Fr. Brake Ass'y	1	
12	53104-M3B-0000	Handle Weigth Rubber	2	
14	53106-VT5-0002-T1	L. Handle Pipe Weigth	2	
15	53108-N02-000	Special Nut 6 mm	2	
16	53140-VT5-0000	R. Handle Grip Comp.	1	
17	53166-VT5-0000	L. Handle Grip	1	
18	53167-H09-9001-L1	Throt. Under Housing	1	
19	53168-H09-0001	Throt. Upper Housing	1	
20	53176-M9P-0000	R. Steering Handle Lever	1	
21	53178-H5K-0001	L. Steering Handle Lever	1	

# F02 CABLE-HANDLE LEVER

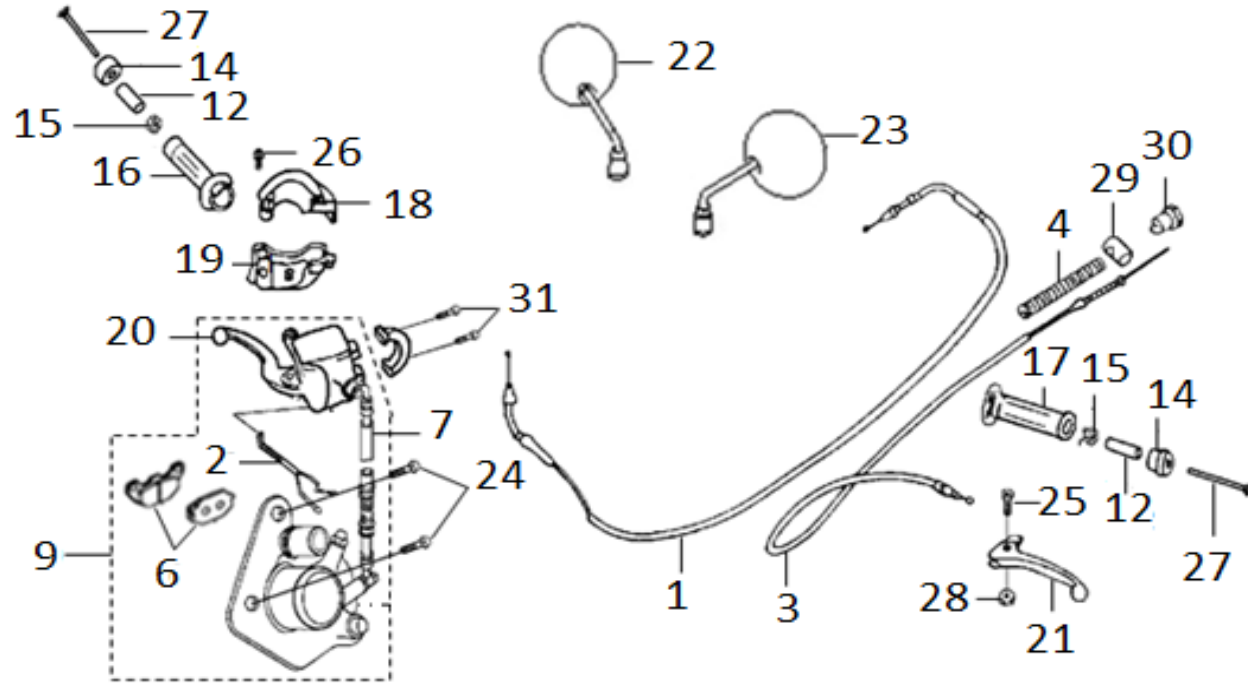


No.	Part No.	Description	Qty	Remark
22	88110-VJ3-0001	R. Back Mirror Ass'y	1	
23	88120-VJ3-0001	L. Back Mirror Ass'y	1	
24	90106-H21-9000	Flange Bolt 8x35	2	
25	90115-M9Q-0000	Handle Lever Pivot Screw	1	
26	93500-05022-00	Pan Screw 5x22	2	
27	93700-06060-0G	Oval Screw 6x60	2	
28	94001-05070-0S	Hex Nut 5 mm	1	
29	95015-32001	Brake Arm Joint B	1	
30	95015-42000-00	Adjust Nut B	1	
31	96700-06012-08-L1	Socket Bolt 6x12	2	

# F03 STEERING HANDLE-HANDLE

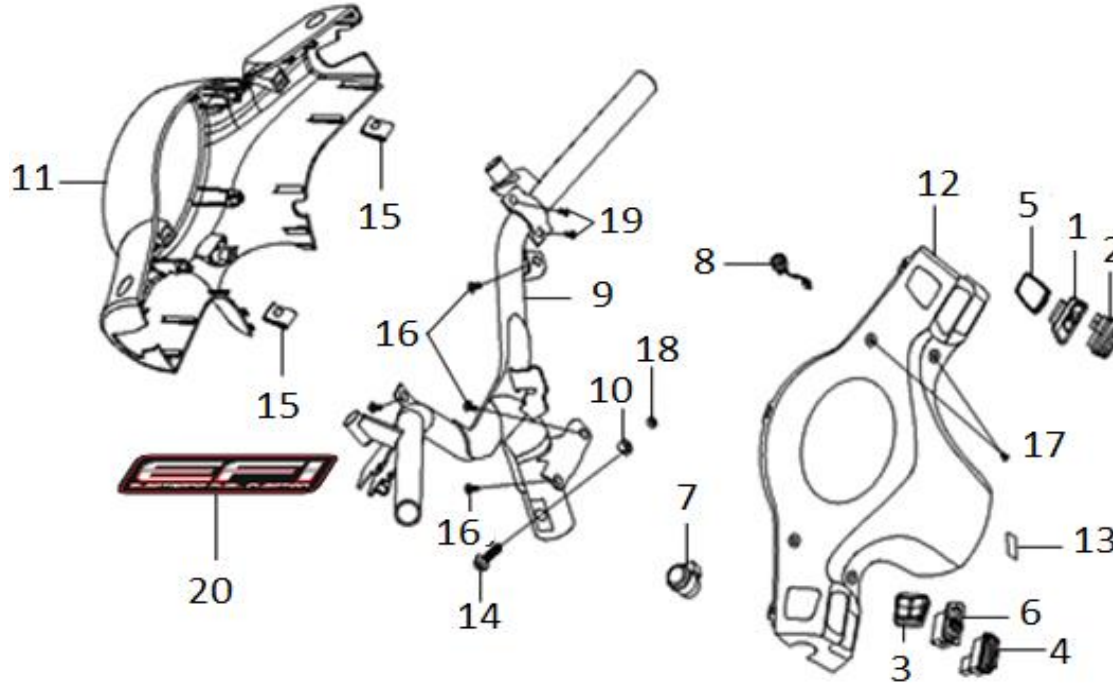


No.	Part No.	Description	Qty	Remark
1	35150-A39-0002-L1	Light Switch Unit	1	
2	35160-VS1-0000-L1	Start Switch Unit	1	
3	35170-A45-9000	Dimmer & Passing Sw. Unit	1	
4	35180-VT5-0000	Horn Switch Unit	1	
5	35190-VT5-0000	Seat Open Switch	1	
6	35200-M9Q-0001	Winker Switch Unit	1	
7	38300-VA3-0000	Winker Relay Ass'y	1	
8	38400-VT1-0000	Elec. Buzzer Ass'y	1	
9	53100-VJ3-0006	Steering Handle Comp.	1	
10	53125-M9Q-000	Handle Setting Collar	1	
11	53205-VJ3-0001-IL	Fr. Handle Cover (GY-064S) - Grey	1	IL - GREY
11	53205-VJ3-0001-RT	Fr. Handle Cover (R-416) - Red	1	RT - RED
11	53205-VJ3-0001-WB	Fr. Handle Cover (WH-058P) - White	1	WB - WHITE
12	53206-VJ3-0001-IL	Rr. Handle Cover (GY-064S) - Grey	1	IL - GREY
12	53206-VJ3-0001-RT	Rr. Handle Cover (R-416) - Red	1	RT - RED
12	53206-VJ3-0001-WB	Rr. Handle Cover (WH-058P) - White	1	WB - WHITE

# F03 STEERING HANDLE-HANDLE

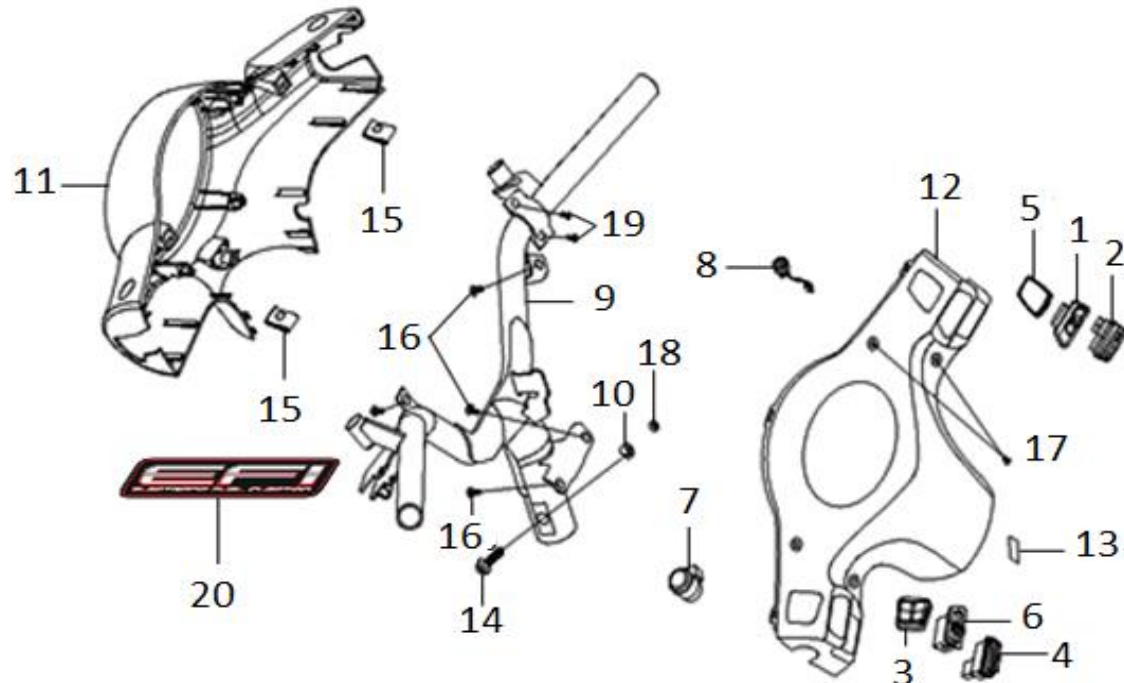


No.	Part No.	Description	Qty	Remark
13	87560-VT5-0000	Drive Caution Mark	1	
14	90106-VT3-0002-L1	Flange Bolt 10x50	1	
15	90302-SA4-003B	Spring Nut 4 mm	2	
16	93903-35280	Tapping Screw 5x12	4	
17	93903-44480	Tapping Screw 4x16	4	
18	94050-10070	Flange Nut 10 mm	1	
19	96700-06012-08-L1	Socket Bolt 6x12	2	
20	87148-VWA-0003	EFI Emblem	1	

## F04 FRONT COVER - TOP COVER

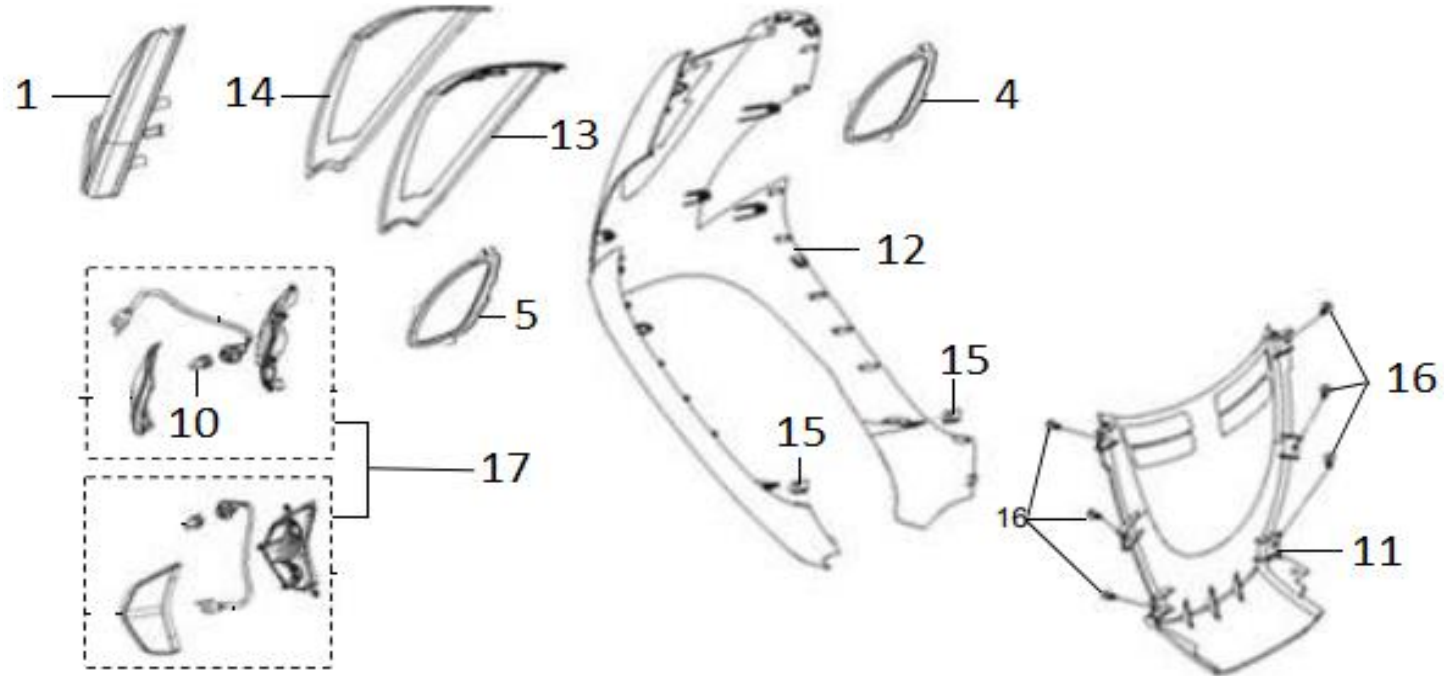


No.	Part No.	Description	Qty	Remark
1	33140-VJ7-0000	Fr. Position Lamp Ass'y	1	
4	33406-VJ3-0000	Fr R Winker Garnish	1	
5	33407-VJ3-0000	Fr L Winker Garnish	1	
11	64300-VJ3-0000-IL	Fr. Under Spoiler (GY-064S) Grey	1	IL - GREY
11	64300-VJ3-0000-RT	Fr. Under Spoiler (R-416) Red	1	RT - RED
11	64300-VJ3-0000-WB	Fr. Under Spoiler (WH-058P) White	1	WB - WHITE
12	64301-VJ3-0001-IL	Fr. Cover (GY-064S) - Grey	1	IL - GREY
12	64301-VJ3-0001-RT	Fr. Cover (R-416) - Red	1	RT - RED
12	64301-VJ3-0001-WB	Fr. Cover (WH-058P) - White	1	WB - WHITE
13	64302-VJ3-0002-T0	Fr. Top Cover	1	
14	64303-VJ3-0002	Fr. Top Cover Cover Emblem	1	
15	90302-SA4-003B	Spring Nut 4 mm	2	
16	93903-34320	Tapping Screw 4X12	6	
17	3340A-VJ3-0000	Fr. Winker Ass'y	1	

# F05 INNER BOX

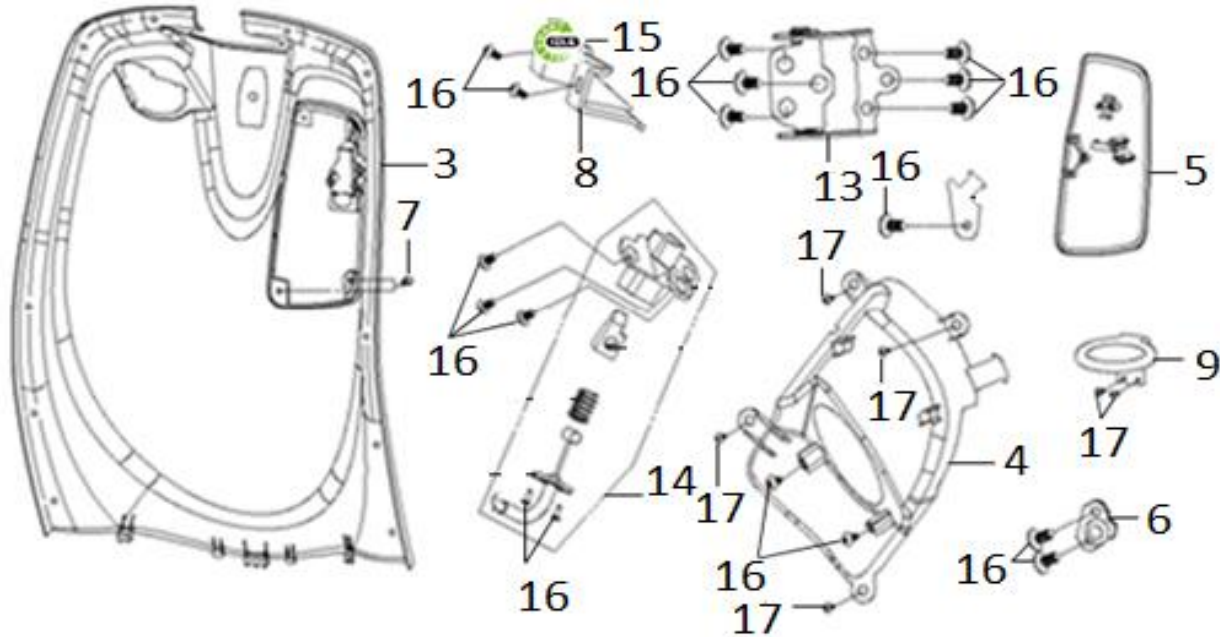

No.	Part No.	Description	Qty	Remark
3	64304-VJ3-0003-IL	Inner Cover (GY-064S) - Grey	1	IL-GREY
3	64304-VJ3-0003-RT	Inner Cover (R416) - Red	1	RT-RED
3	64304-VJ3-0003-WB	Inner Cover (WH-058P) - White	1	WB-WHITE
4	64305-VJ3-0002	Filler Cover	1	
5	64308-VJ3-0003-IL	Fuel Cap Cover (GY-064S) - Grey	1	IL-GREY
5	64308-VJ3-0003-RT	Fuel Cap Cover (R-416) - Red	1	RT-RED
5	64308-VJ3-0003-WB	Fuel Cap Cover (WH-058P) - White	1	WB-WHITE
6	64309-VUA-0003	Fuel Cap Hook Comp	1	
7	64312-VUA-0001	Fuel Cap Stoper Rubber	4	
8	64314-VJ3-0000-IL	Inner Cover Joint Cap (GY-064S) - Grey	1	IL-GREY
8	64314-VJ3-0000-RT	Inner Cover Joint Cap (R-416) - Red	1	RT-RED
8	64314-VJ3-0000-WB	Inner Cover Joint Cap (WH-058P) - White	1	WB-WHITE
9	64330-VUA-0002	Fuel Filler Cap Holder	1	
13	8114A-VJ3-0002	Fuel Cap Hinge Ass'y	1	
14	8114B-VJ3-0000	Fuel Cap Loock Ass'y	1	
15	87147-VUH-0000	Smart Idle Stripe	1	
16	93903-34320	Tapping Screw 4X12	16	
17	93903-34380	Tapping Screw 4X12	8	


## F06 FRONT FENDER-FRONT INNER FENDER

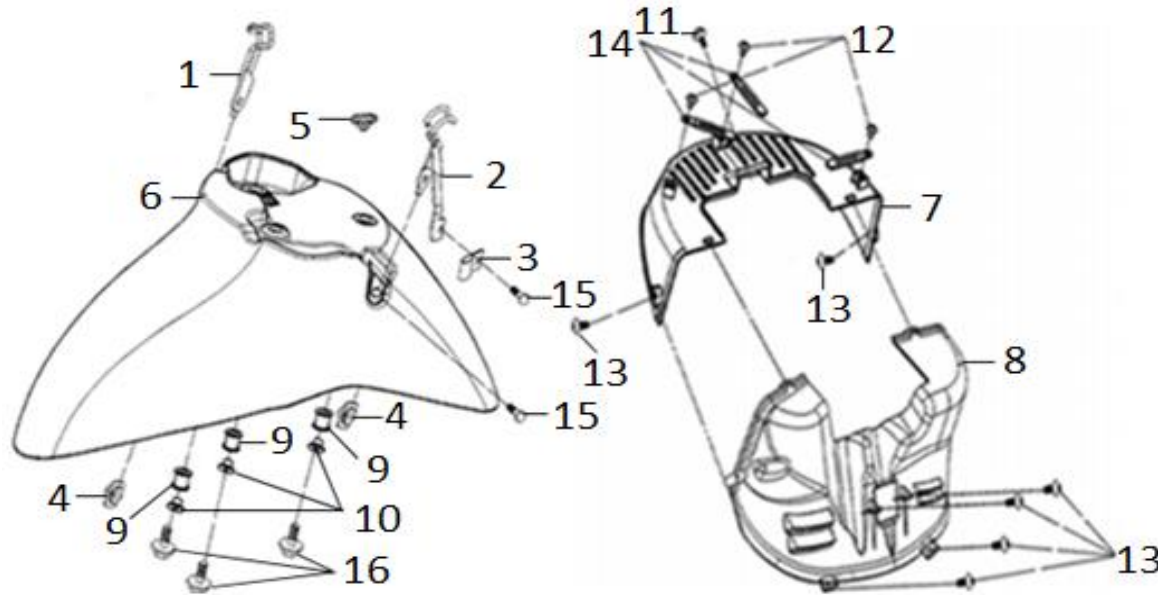

No.	Part No.	Description	Qty	Remark
1	44831-VUA-0003	Speedometer Cable Guide	1	
2	45156-VUA-0005	Brake Hose Clamper	1	
3	45157-VA1-0001	Brake Hose Clamper B	1	
4	45158-VJ3-0000	Brake Cable Holder	2	
5	45451-N02-0000	Wire Grommet	1	
6	61100-VJ3-0002-IL	Fr. Fender (GY-064S) - Grey	1	IL-GREY
6	61100-VJ3-0002-RT	Fr. Fender (R-416) - Red	1	RT-RED
6	61100-VJ3-0002-WB	Fr. Fender (WH-058P) - White	1	WB-WHITE
7	61101-VJ3-0002	Fr. Inner Fender A	1	
8	61102-VJ3-0004	Fr. Inner Fender B	1	
9	61104-VVC-0000	Fr. Fender Rubber	3	
10	61201-M3G-0001	Fr. Fender Collar	3	
11	90111-M9Q-8000-L1	Flange Bolt 6mm	1	
12	93903-24220-10	Tapping Screw 4*10	3	
13	93903-34380	Tapping Screw 4*12	6	
14	94591-21000	Clip 2*100	3	
15	96001-06012-07	Sh. Flange Bolt 6*12	2	
16	96001-06020-08-L1	Sh. Flange Bolt Bolt 6X20	3	




# F07 FLOOR PANEL-CENTER COVER

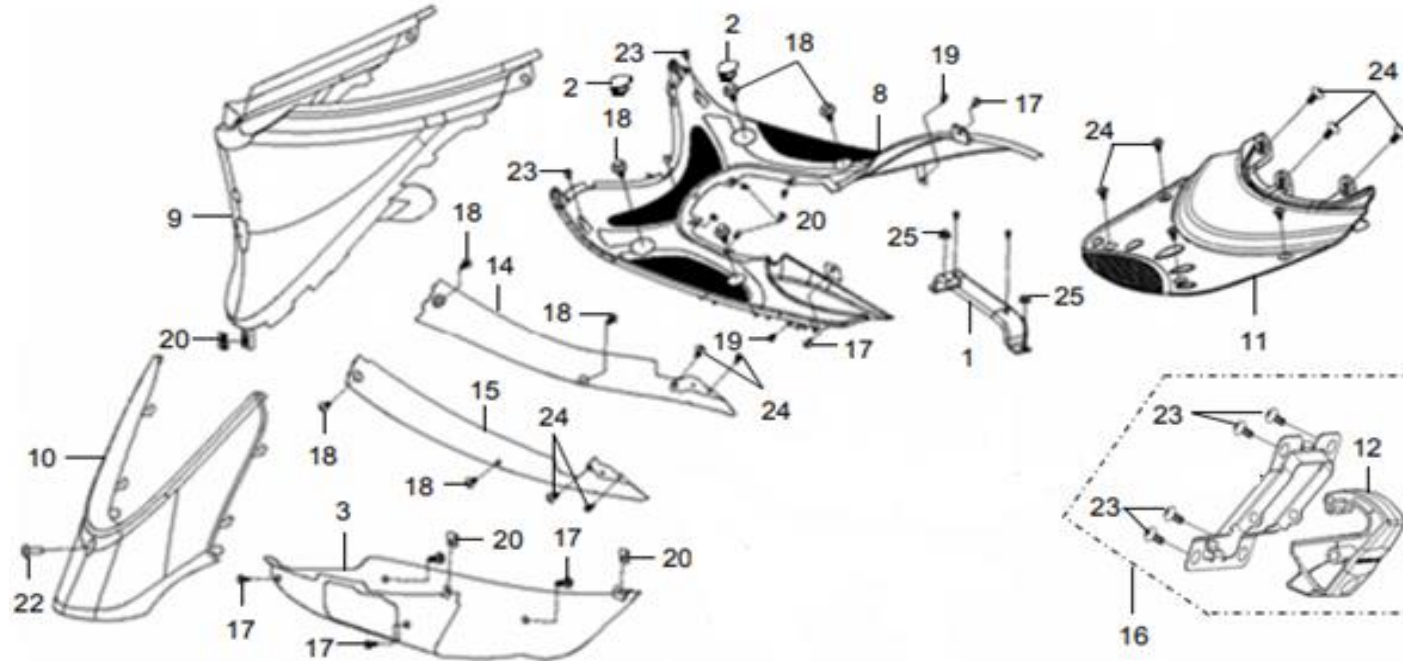


No.	Part No.	Description	Qty	Remark
1	50141-VJ3-0002	Floor Panel Plate	1	
2	50612-VJ4-0001-T0	Floor Step Cap A	4	
3	50613-VJ3-0001	Under Cover	1	
8	64310-VJ3-0003-NC	Floor Panel	1	
9	80152-VJ3-0002-IL	Center Cover A (GY-064S) - Grey	1	IL-GREY
9	80152-VJ3-0002-RT	Center Cover A (R416) - Red	1	RT-RED
9	80152-VJ3-0002-WB	Center Cover A (WH-058P) - White	1	WB-WHITE
10	80153-VJ3-0002-IL	Center Cover B (GY-064S) - Grey	1	IL-GREY
10	80153-VJ3-0002-RT	Center Cover B (R416) - Red	1	RT-RED
10	80153-VJ3-0002-WB	Center Cover B (WH-058P) - White	1	WB-WHITE
11	80154-VJ3-0005-T1	Center Cover C	1	
12	81132-VJ3-0001	Luggage Hook A	1	
14	83520-VJ3-0003-IL	R. Side Cover (GY-064S) - Grey	1	IL-GREY
14	83520-VJ3-0003-RT	R. Side Cover (R-416) - Red	1	RT-RED
14	83520-VJ3-0003-WB	R. Side Cover (WH-058P) - White	1	WB-WHITE

# F07 FLOOR PANEL-CENTER COVER

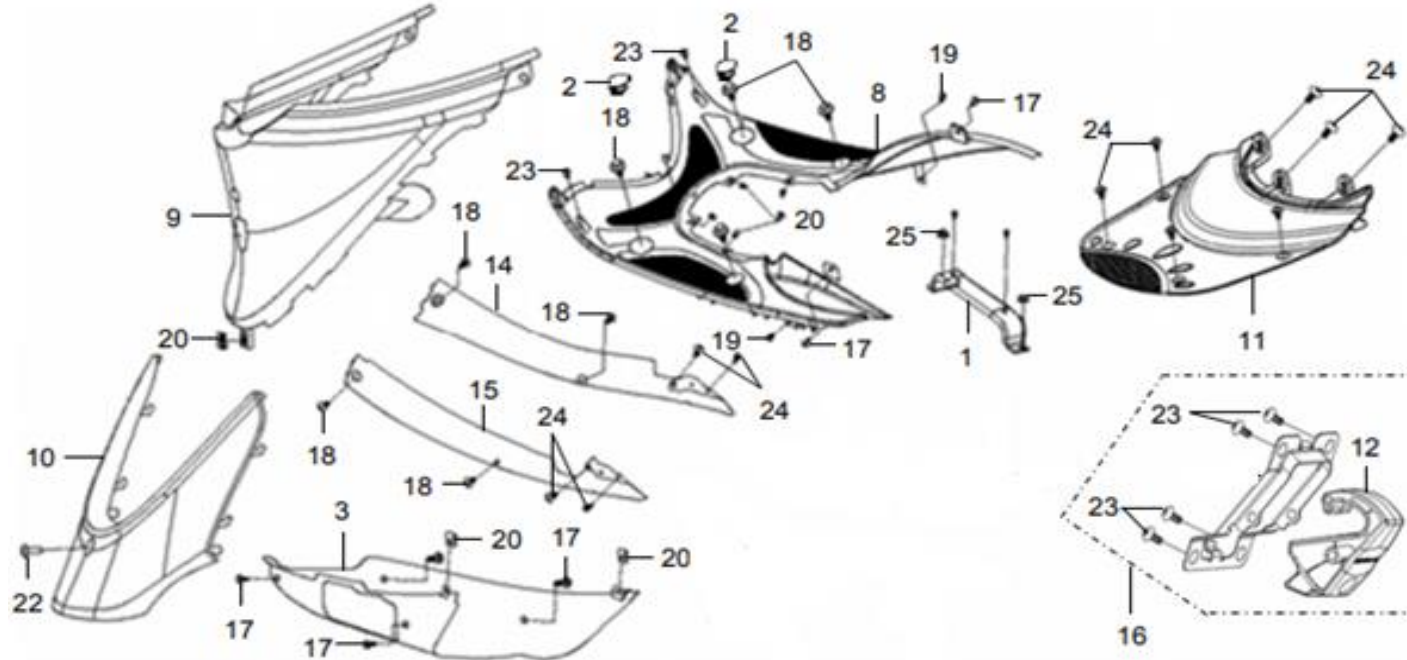


No.	Part No.	Description	Qty	Remark
15	83620-VJ3-0003-IL	L. Side Cover (GY-064S) - Grey	1	IL-GREY
15	83620-VJ3-0003-RT	L. Side Cover (R-416) - Red	1	RT-RED
15	83620-VJ3-0003-WB	L. Side Cover (WH-058P) - White	1	WB-WHITE
16	8113B-VJ3-0000	Luggage Hook A Ass'y	1	Parent Part
17	90111-M9Q-8000-L1	Flange Bolt 6 mm	8	
18	90118-HAA-000	Washer Bolt 5x14	4	
19	90302-M9Q-0000	Washer Bolt 5x12	4	
20	90302-SA4-003B	Spring Nut 4 mm	6	
21	93404-06012-07	Washer Bolt 6x12	2	
22	93903-34320	Tapping Screw 4x12	4	
23	93903-35280	Tapping Screw 5*12	8	
24	93903-44380	Tapping Screw 4x12	12	
25	94050-06080	Flange Nut 6 mm	2	

# F08 LUGGAGE BOX

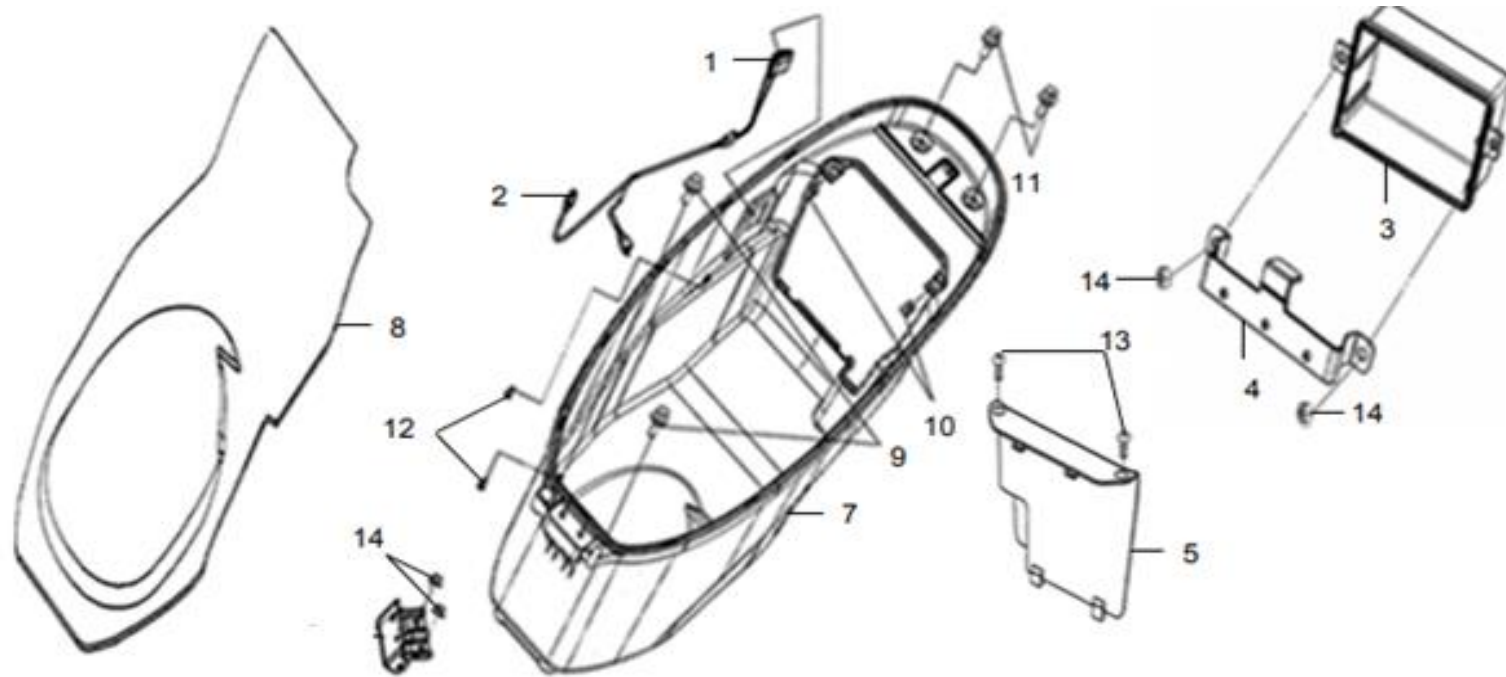


No.	Part No.	Description	Qty	Remark
1	35370-VJ3-0000	Luggage Box Light Ass'y	1	
2	35380-VUA-0000	Lamp Switch Ass'y	1	
3	50321-VJ3-0001	Battery Case Comp	1	
4	50324-VJ3-0000	Battery Band	1	
5	50326-VJ3-0001	Battery Cover	1	
7	81250-VJ3-0003	Luggage Box	1	
8	83630-VJ3-0000	Luggage Box Mat Comp	1	
9	90111-M9Q-8000-L1	Flange Bolt 6 mm	2	
10	90302-SA4-003B	Spring Nut 4 mm	2	
11	93404-06012-07	Washer Bolt 6x12	2	
12	93903-34280	Tapping Screw 4x12	2	
13	93903-44380	Tapping Screw 4x12	2	
14	94050-06080	Flange Nut 6 mm	4	

# F09 BODY COVER - SIDE COVER

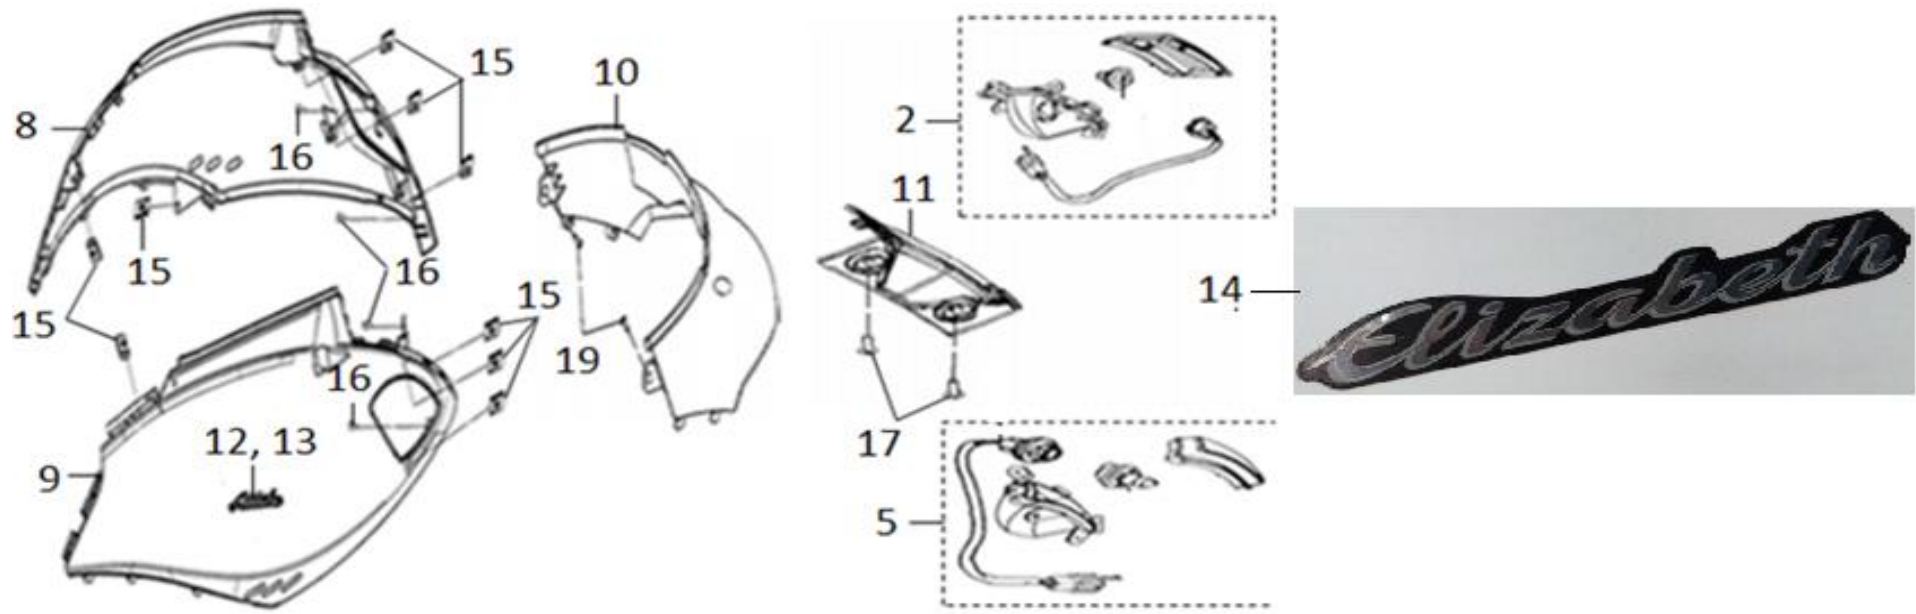


No.	Part No.	Description	Qty	Remark
2	33600-VJ3-0001	Rr. R Winker Ass'y	1	
5	33650-VJ3-0001	Rr. L Winker Ass'y	1	
8	83500-VJ3-0003-IL	R. Body Cover (GY-064S) - Grey	1	IL-GREY
8	83500-VJ3-0003-RT	R. Body Cover (R-416) - Red	1	RT-RED
8	83500-VJ3-0003-WB	R. Body Cover (WH-058P) - White	1	WB-WHITE
9	83600-VJ3-0003-IL	L. Body Cover (GY-064S) - Grey	1	IL-GREY
9	83600-VJ3-0003-RT	L. Body Cover (R-416) - Red	1	RT-RED
9	83600-VJ3-0003-WB	L. Body Cover (WH-058P) - White	1	WB-WHITE
10	83750-VJ3-0002-IL	Rr. Up. Center Cover (GY-064S) - Grey	1	IL-GREY
10	83750-VJ3-0002-RT	Rr. Up. Center Cover (R-416) - Red	1	RT-RED
10	83750-VJ3-0002-WB	Rr. Up. Center Cover (WH-058P) - White	1	WB-WHITE
11	83751-VJ3-0001-IL	Rr Lwr Center Cover (GY-064S) - Grey	1	IL-GREY
11	83751-VJ3-0001-RT	Rr Lwr Center Cover (R-416) - Red	1	RT-RED
11	83751-VJ3-0001-WB	Rr Lwr Center Cover (WH-058P) - White	1	WB-WHITE
12	87128-VT5-0000	R. Body Cover Emblem	1	
13	87138-VT5-0000	L. Body Cover Emblem	1	

# F09 BODY COVER - SIDE COVER

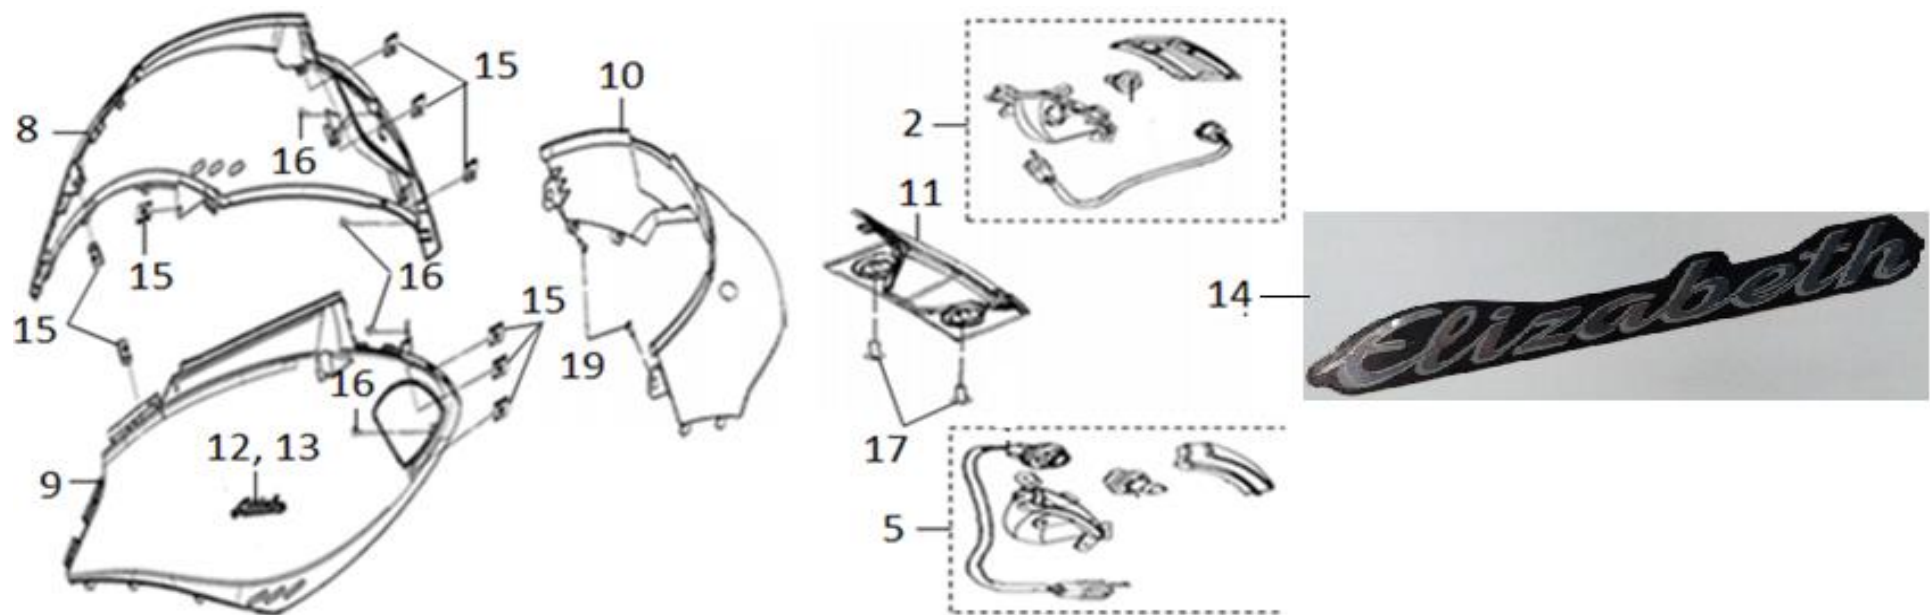


No.	Part No.	Description	Qty	Remark
14	87148-VJ7-0001	Body Cover Emblem A ( ELIZABETH )	2	
15	90302-SA4-003B	Spring Nut 4 mm	10	
16	93903-34320	Tapping Screw 4*12	4	
17	93903-44380	Tapping Screw 4*12	2	
18	93903-35280	Tapping Screw 5*12	5	

# F10 FRONT CUSHION - STEERING STEM

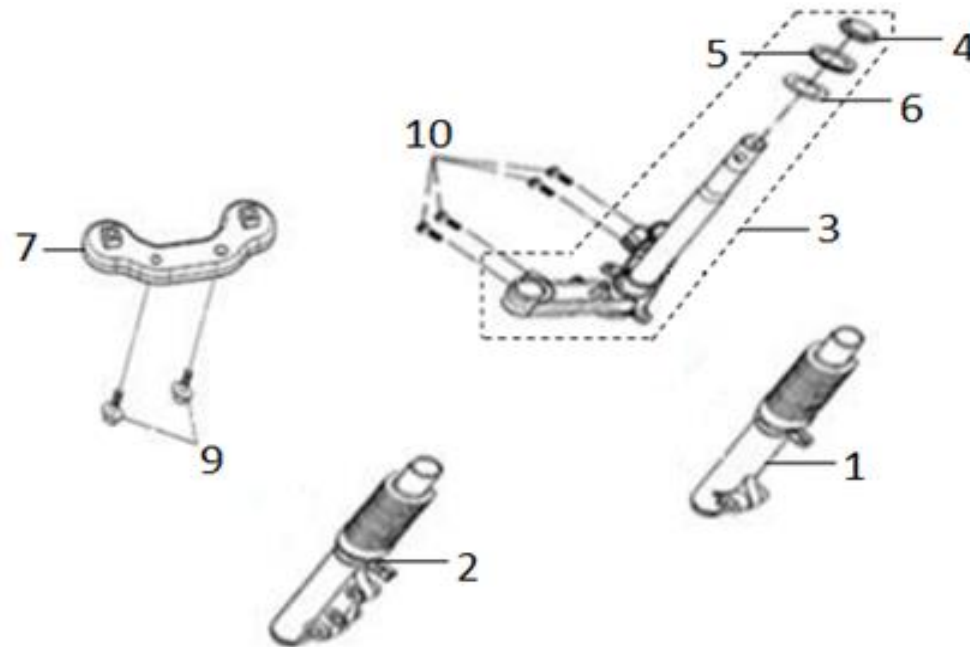


No.	Part No.	Description	Qty	Remark
1	5140A-VJ3-0001	R. Fr. Cushion Set	1	
2	5150A-VJ3-0001	L. Fr. Cushion Set	1	
3	5320E-VJ3-0002	Steering Stem Comp Set	1	
4	53212-M9Q-000-CN2	Race Steering Bottom Cone	1	
5	53214-M9Q-0000	Steering Dust Seal	1	
6	53215-M9Q-0000	Steering Head Dust Seal Washer	1	
7	61110-VJ3-0000	Fr. Fender Stay	1	
9	95801-06010-08	Flange Bolt 6*10mm	2	
10	95801-08040-08	Flange Bolt 8*40	4	

# F11 FRONT WHEEL

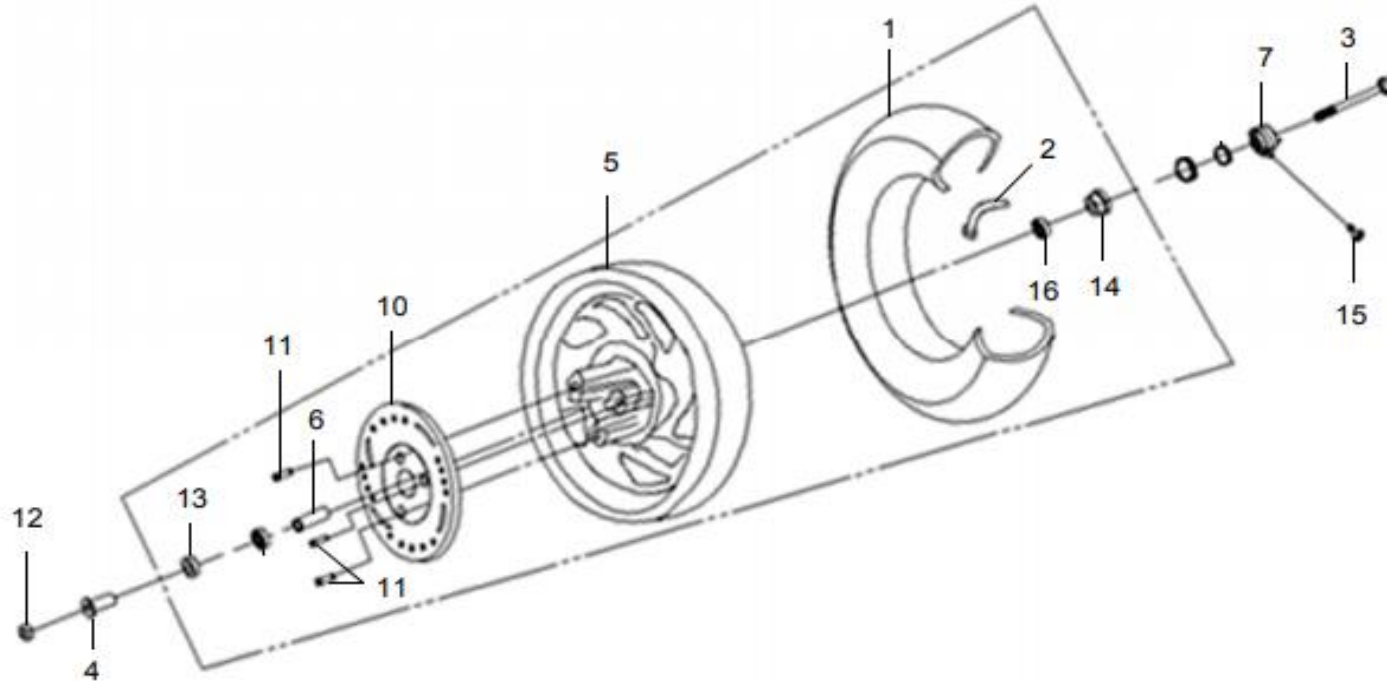

No.	Part No.	Description	Qty	Remark
1	AC-SC104-100/90-10	Tubeless Tire Set	1	
2	42753-M92-0003-M4	Rim Valve	1	
3	44301-VT5-0000	Fr. Wheel Axle	1	
4	44311-VUA-0000	Fr. Wheel Side Collar	1	
5	44601-VT5-0000-VN	Fr. Wheel Cast	1	
6	44620-H6C-0001	Fr. Axle Distance Collar	1	
7	44800-VT7-0003	SPDMT Gear Box Ass'y	1	
10	45121-M9P-0000	Fr. Brake Disk	1	
11	90105-KR3-000	Fr. Disk Bolt 8x24	3	
12	90306-SB1-0000	Self Lock Nut 12 mm	1	
13	90754-M9Q-000	Dust Seal 20x32x5	1	
14	91258-M9Q-0000-M1/M2	Speedometer Gear Box Seal	1	
15	93891-05022-07	Washer Bolt 5x22	1	


# F12 REAR WHEEL

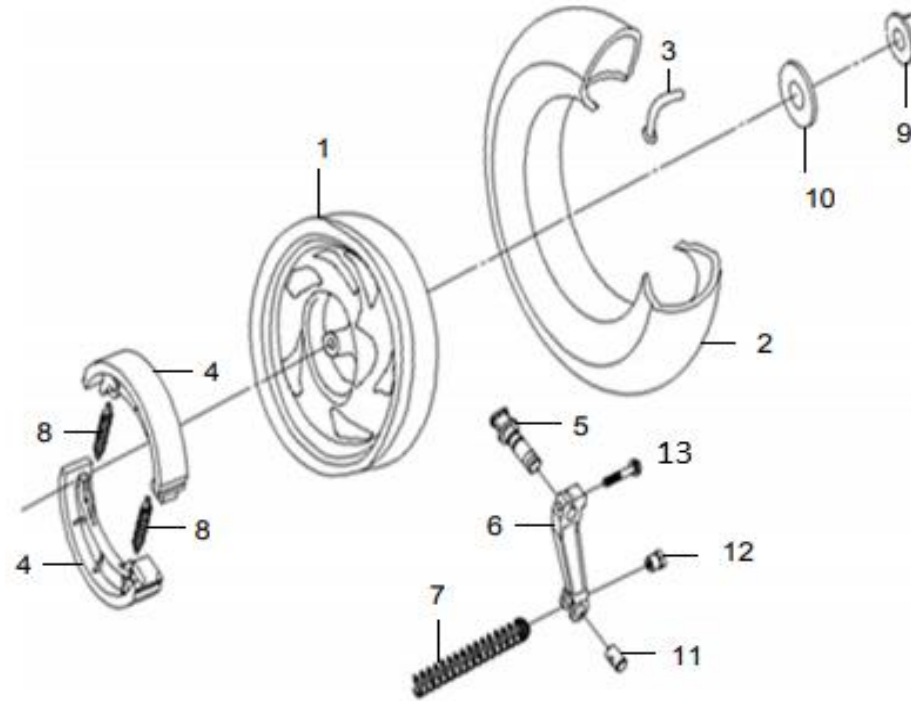

No.	Part No.	Description	Qty	Remark
1	42601-VT5-0000-VN	Rr. Wheel Cast.	1	
2	AC-SC104-100/90-10	Tubeless Tire Ass'y	1	
3	42753-M92-0003-M4	Rim Valve	1	
4	4312B-M9B-0000	Brake Shoe Comp.	2	
5	43141-VT4-0002	Rr. Brake Cam	1	
6	43410-VJ3-0001	Rr. Brake Arm Comp.	1	
7	43472-T5C-0000	Rr. Brake Return Spring	1	
8	45133-M92-0000	Brake Shoe Spring	2	
9	90305-M9Q-900	Self Lock Nut 16 mm	1	
10	90501-M9Q-0000-L1	Washer 16 mm	1	
11	95015-32001	Brake Arm Joint B	1	
12	95015-42000-00	Adjust Nut B	1	
13	95701-06028-00	Flange Bolt 6x28	1	




# F13 SEAT - REAR CARRIER

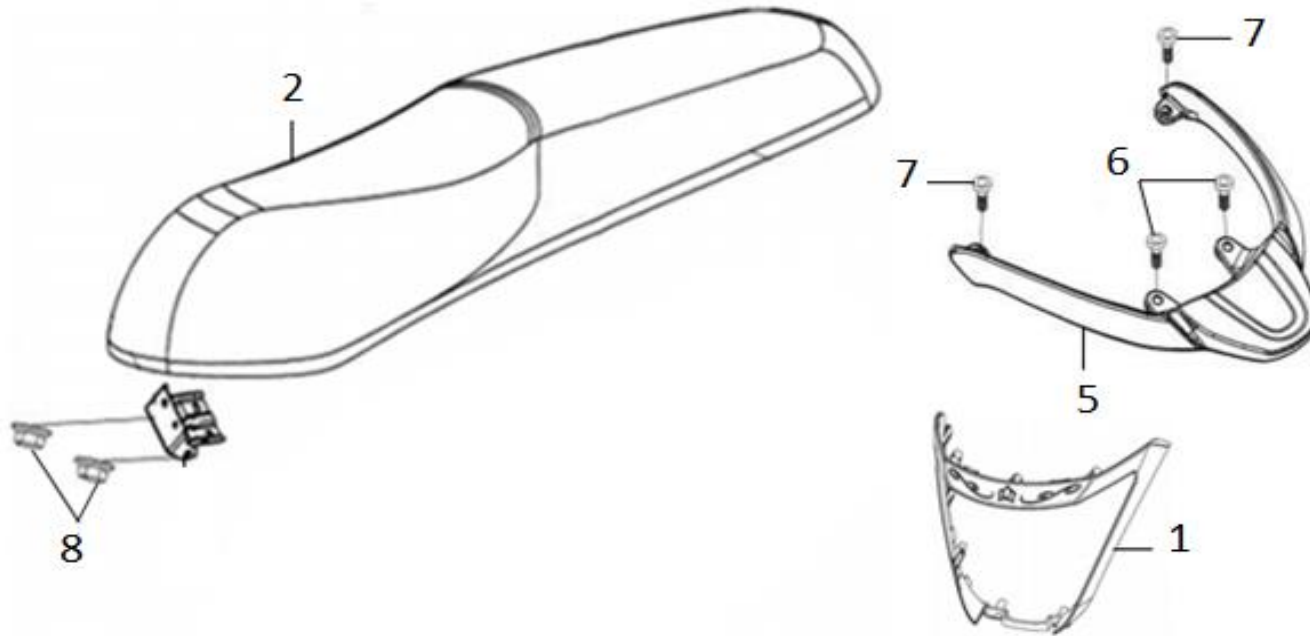


No.	Part No.	Description	Qty	Remark
1	33701-VJ3-0003	Tail Light Rim	1	
2	7710A-VJ3-0003-T1	Double Seat Set	1	
5	81200-VJ3-0000-SM	Rr. Carrier Comp.	1	
6	90105-M9Q-0000	Special Bolt 8mm	2	
7	93406-08012-08	Washer Bolt 8x12	2	
8	94050-06080	Flange Nut 6 mm	2	

# F14 FUEL TANK - FUEL PUMP

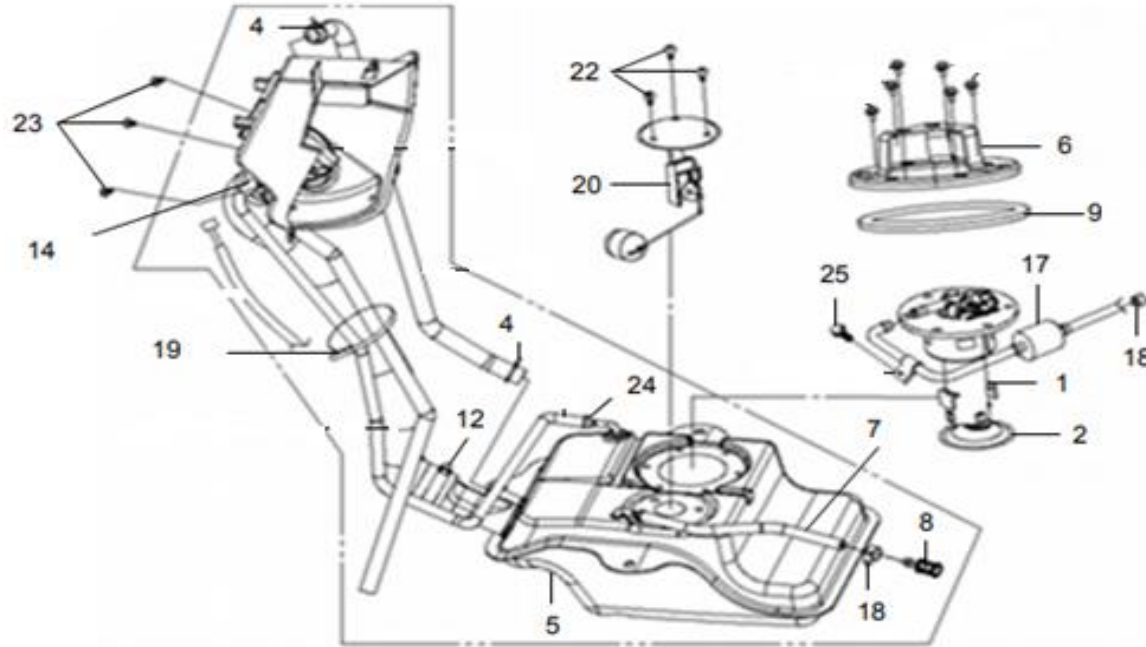


No.	Part No.	Description	Qty	Remark
1	1670A-ADC-0000	Fuel Pump Ass'y	1	
2	16711-M9Q-000	Fuel Filter Comp	1	
4	17369-KB4-670A-L1	Breather Tube Clip	2	
5	17500-VJ3-0002	Fuel Tank Comp.	1	
6	17503-VJ3-0001	Fuel Tank Stay Comp	1	
7	17504-VJ3-0002	Fuel Drain Tube	1	
8	17505-VUA-0000	Fuel Drain Plug	1	
9	17510-VWA-0000	Fuel Pump Packing	1	
12	17652-TAA-000	Filler Tube Clip	2	
14	17660-VUA-0006	Filler Pipe Comp	1	
17	1778A-VJ3-0006	Fuel Strainer Ass'y	1	
18	19505-H5D-0001	Hose Clamp	3	
19	32161-T15-000	Wire Band 250	1	
20	37800-VJ3-0004	Fuel Unit Ass'y	1	
22	93892-05012-08	Washer Screw 5*12	3	
23	93903-34320	Tapping Screw 4*12	3	
25	95801-06012-08	Flange Bolt 6X12	1	

# F15 AIR CLEANER

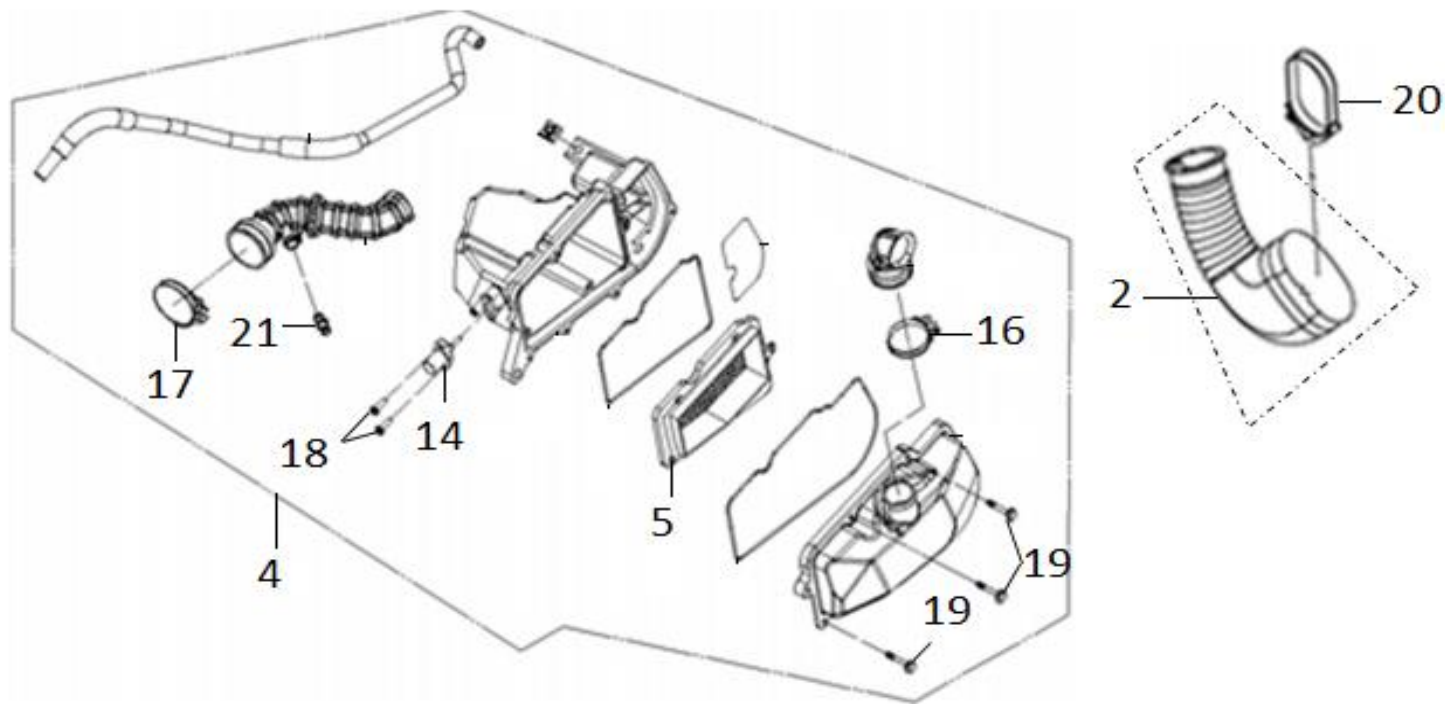


No.	Part No.	Description	Qty	Remark
2	11345-VJ3-0001	L. Cover Duct	1	
4	17200-VJ3-0005	Air Cleaner Assy	1	
5	17211-KAD-0001	Air/C Element Comp	1	
14	37830-HMC-000	Air Temp. Sensor	1	
16	90652-G03-000	Air Cleaner Tube Band 40	1	
17	90652-M8Q-000	Air Cleaner Tube Band 46	1	
18	93891-05016-07	Washer Screw 5*16	2	
19	93903-25480	Tapping Screw 5*20	7	
20	11346-M9Q-000-VN	L. Cover Duct Band	1	
21	17359-M9Q-0000	Breather Tube Joint	1	

# F16 MAIN STAND

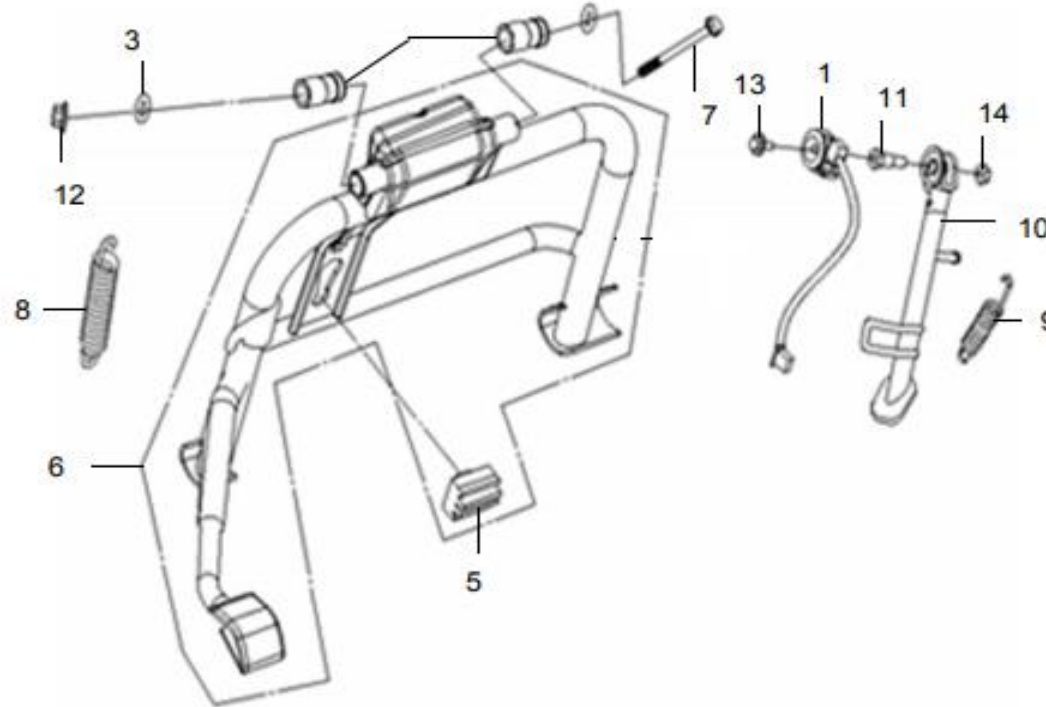


No.	Part No.	Description	Qty	Remark
1	36500-HMA-9001-L1	Side Stand Sw. Comp	1	
3	50503-F6B-000	Main Stand Washer	2	
4	50504-Z6A-000	Main Stand Collar	2	
5	50505-VJ3-0000	Stand Stopper Rubber	1	
6	5050A-VJ3-0001	Main Stand Ass'y	1	
7	50512-F6B-9000-L1	Main Stand Pivot Bolt	1	
8	50522-A3U-0001	Main Stand Spring	1	
9	50522-F8F-0002	Side Stand Spring	1	
10	50530-VJ1-0005	Side Stand Comp.	1	
11	90108-VJ1-0000	Side Stand Pivot Screw	1	
12	90309-M9Q-000	Flange Nut 8mm	1	
13	93404-06016-07	Washer Bolt 6 X 16	1	
14	94030-08080-0S-L1	Hex Nut 8 mm	1	

# F17 ENG HANGER - REAR CUSHION

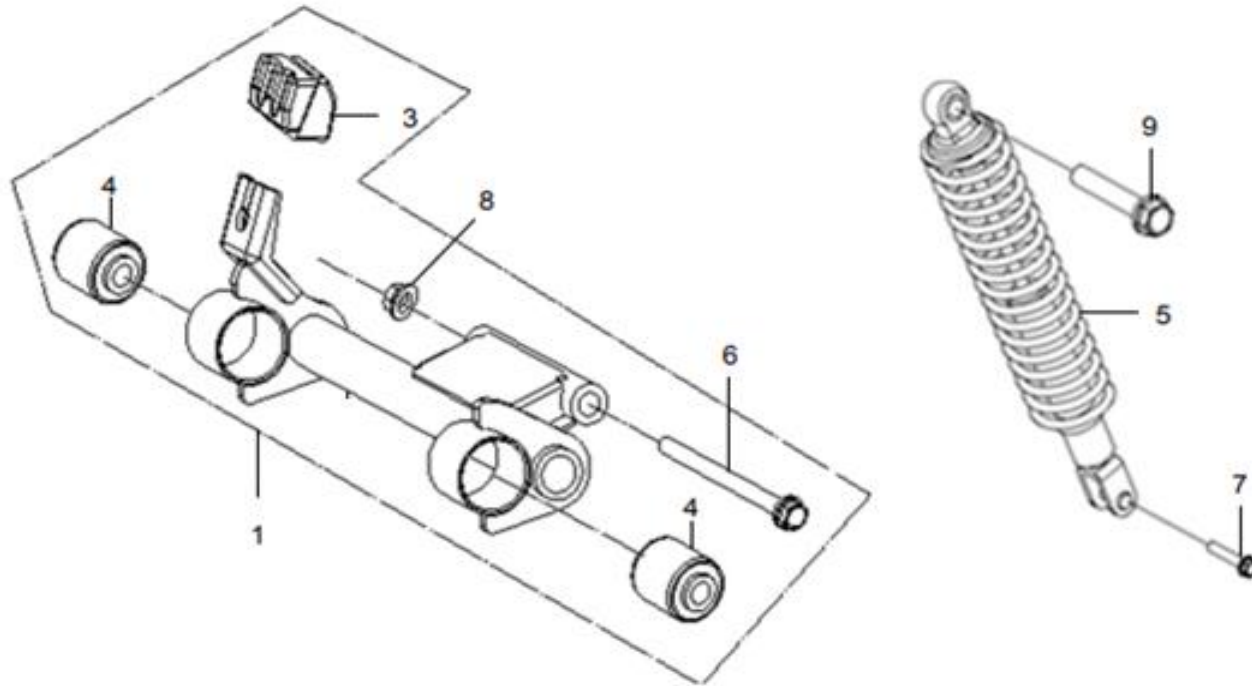


No.	Part No.	Description	Qty	Remark
1	50350-VJ3-0002	Engine Hanger Ass'y	1	
3	50352-ADB-000	Link Stopper Rubber	1	
4	50353-M9Q-000	Swing Lock Bush	2	
5	52400-VJ3-0001	Rr. Cushion Ass'y	1	
6	90105-F6B-9000	Flange Bolt 10x191	1	
7	93201-08032-0H	Hex Bolt 8x32	1	
8	94050-10070	Flange Nut 10mm	1	
9	95801-10040-07	Flange Bolt 10*40	1	

# F18 RR FENDER - TAIL LIGHT

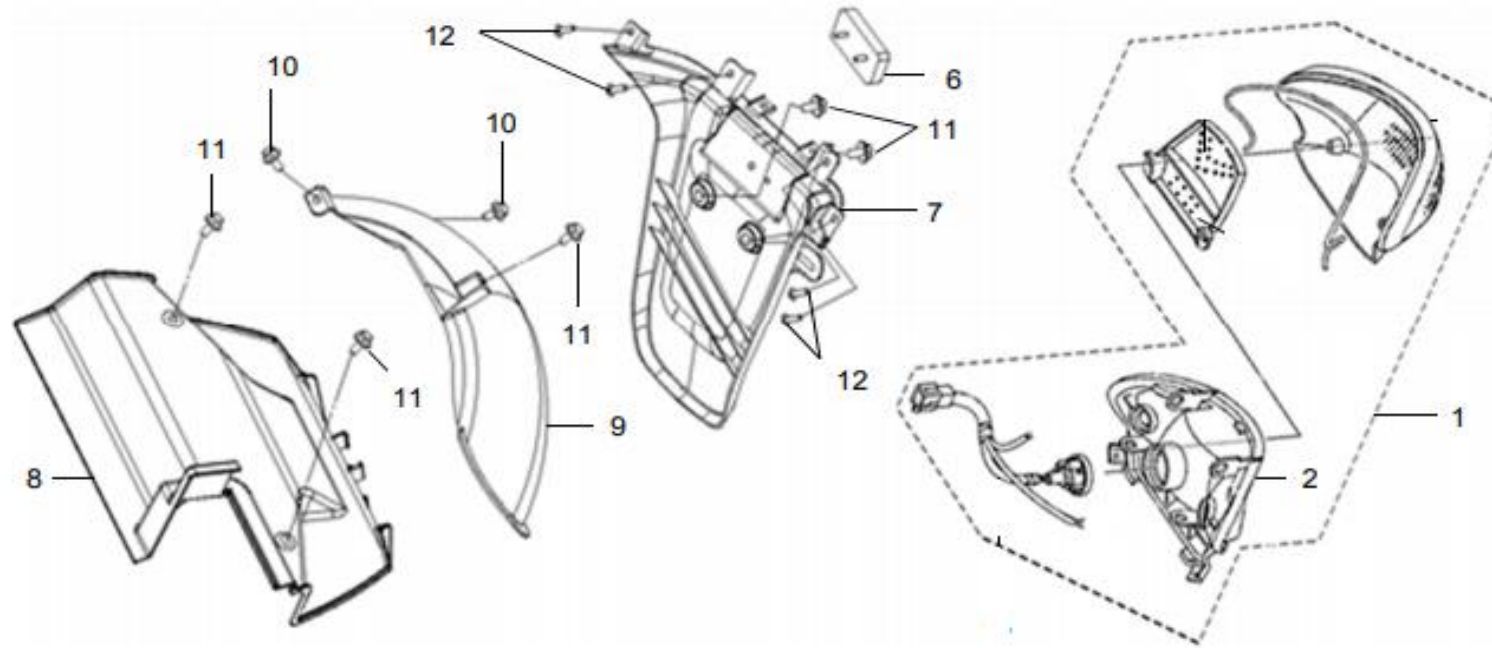


No.	Part No.	Description	Qty	Remark
1	33700-VJ3-0002	Tail Light Ass'y	1	
2	33701-VJ3-0003	Tail Light Base	1	
6	33741-VT5-0000	Reflex Reflector	1	
7	80100-VJ3-0002	Rr. Fender	1	
8	80105-VJ3-0002	Rr. Inner Fender	1	
9	80107-VJ3-0002	Rr. Mudguard	1	
10	90111-M9Q-8000-L1	Flange Bolt 6mm	2	
11	93404-06012-07	Washer Bolt 6X12	5	
12	93903-44380	Tapping Screw 4X12	4	

# F19 WIRE HARNESS

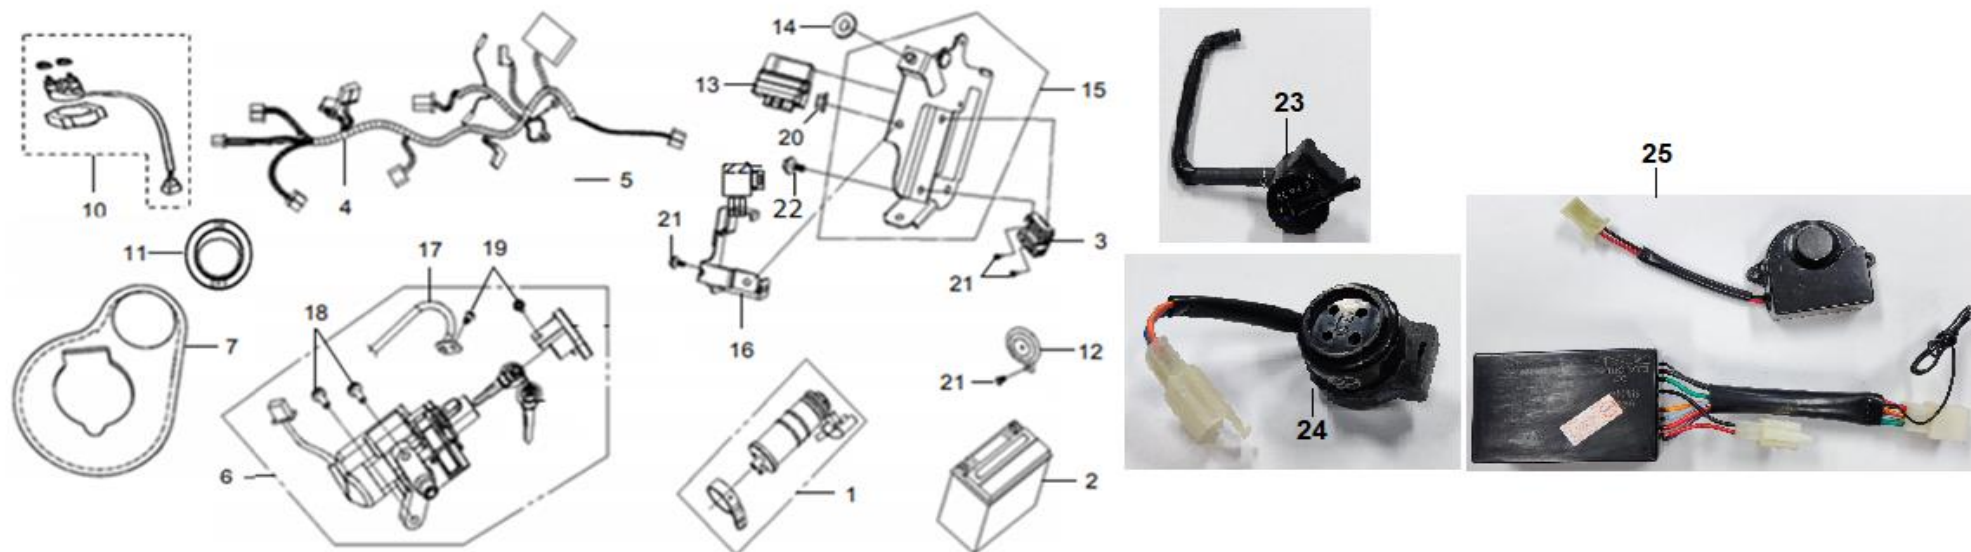

No.	Part No.	Description	Qty	Remark
1	1730B-VJ3-0004	Canister Set	1	
2	AC-YTX7A-BS(HW)	Battery YTX7A-BS ( HW)	1	
3	31600-VJ3-0001	Reg. Rec. Comp	1	
4	32100-VJ4-0003	Wire Harness	1	
5	33800-VUH-0001	Light Down Control Unit	1	
6	3501A-VJ3-0003	Key Set	1	
7	35011-VJ3-0000-SV	Main Switch Panel	1	
10	3585A-VJ3-0002	Start Mag. Sw. Set	1	
11	36600-VJ4-0001	Idling Sw	1	
12	38110-VUA-0001	Horn Comp.	1	
13	38710-L3D-0000	ECU ASS'Y	1	
14	53011-VS1-0000	Damping Rubber	1	
15	64315-VJ3-0003	Fr. Cover Stay	1	
16	64316-VUH-0001	Ecu Protector	1	
17	77240-VUA-0004	Seat Lock Cable	1	
18	90111-VT3-0000	Flange Bolt 6x18	2	


# F19 WIRE HARNESS

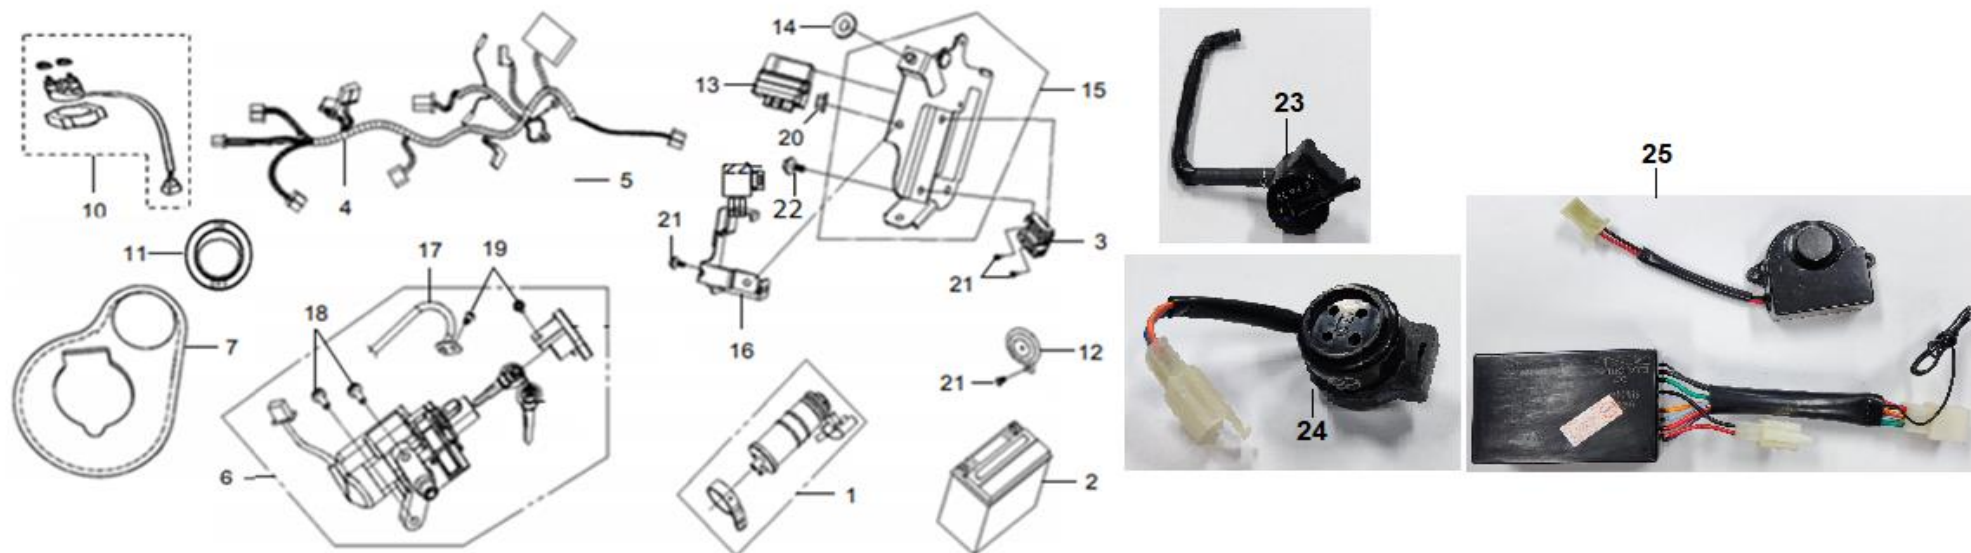

No.	Part No.	Description	Qty	Remark
19	93891-05008-08	Washer Screw 5x8	2	
20	94050-06080	Flange Nut 6mm	1	
21	95801-06012-08	Flange Bolt 6X12	4	
22	95801-06032-08	Flange Bolt 6X32	1	
23	1758A-VJ3-0003	FUEL CUT VALVE ASS'Y	1	
24	38400-VT1-0000	ELECT. BUZZER ASSY	1	
25	39100-VT5-0000	VOLT CONTROL UNIT ASSY	1	




# F20 FRAME BODY

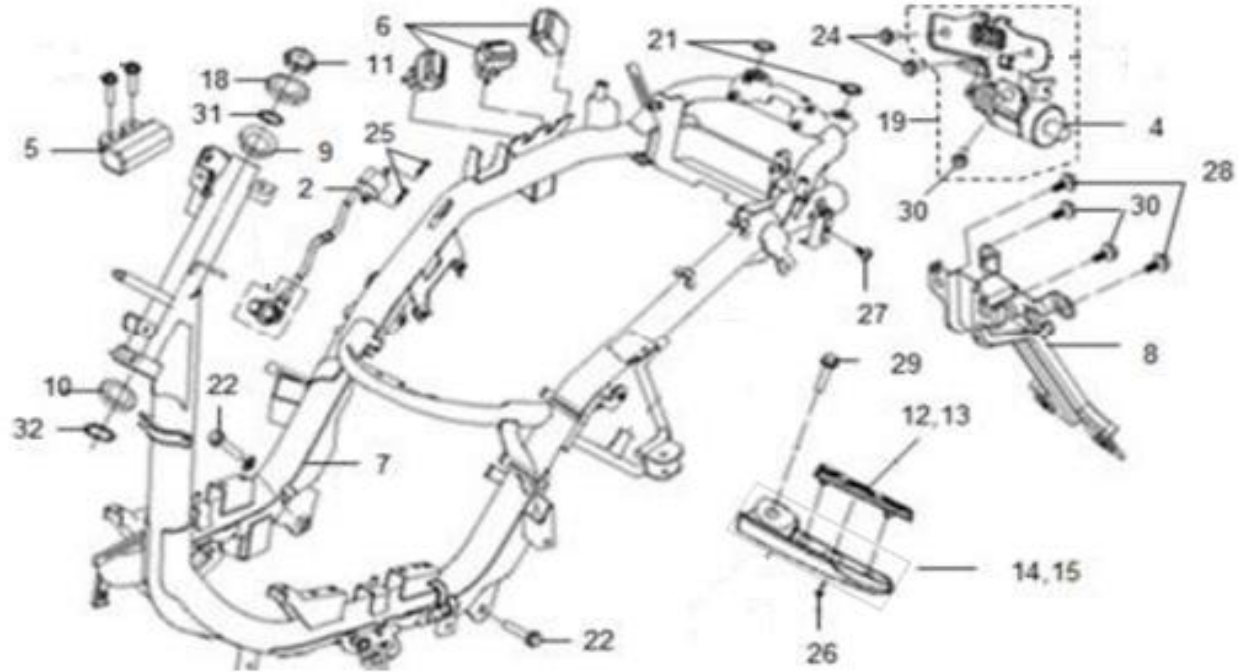


No.	Part No.	Description	Qty	Remark
2	3051A-VJ3-0003	Ignition Coil Ass'y	1	
4	35870-VUC-0000	DC Solenoid Ass'y	1	
5	36100-MMA-1000-E1	Roll Over Sensor Ass'y	1	
6	3850A-HLA-010-A2-L1	Elec. Relay Ass'y	3	
7	50100-VJ3-0011	Frame Body Comp.	1	
8	50109-VJ3-0004	Rr. Fender Brkt.	1	
9	50301-VS1-0000-L1	Strg. Up Race Ball	1	
10	50302-M9Q-0000	Ball Race(Strg. Bot.)	1	
11	50306-M9Q-0000	Strg. Stem Lock Nut	1	
12	50623-VT5-0000	R. Pillion Step Mat	1	
13	50624-VT5-0000	L. Pillion Step Mat	1	
14	5071A-VCA-0004	R. Pillion Step Ass'y	1	
15	5071B-VCA-0004	L. Pillion Step Ass'y	1	
18	53211-M9Q-0000	Strg. Up. Cone Race	1	
19	77230-VUC-0000	Seat Catch Ass'y	1	
21	81203-VJ3-0000	Rr. Carrier Rubber	2	

# F20 FRAME BODY

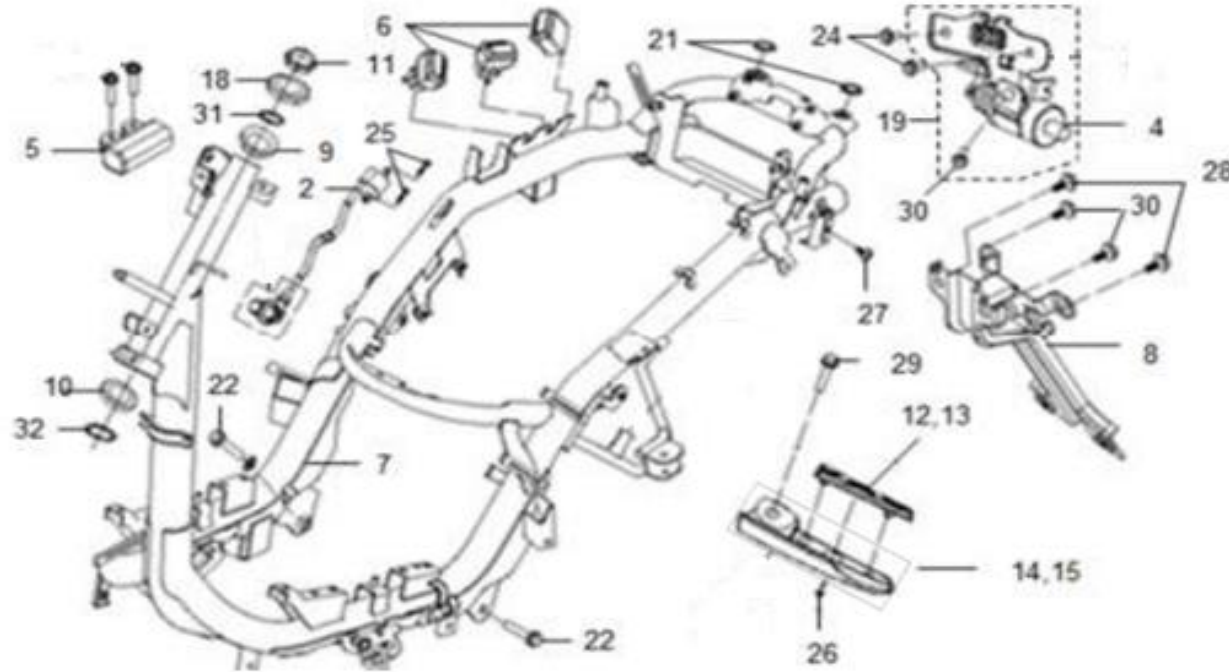

No.	Part No.	Description	Qty	Remark
22	90106-M9Q-900	Flange Bolt 10x55	2	
24	93404-06012-07	Washer Bolt 6*12	2	
25	93500-05016-00	Screw Pan 5x16	2	
26	93600-05012-OH	Flat Screw 5*12	2	
27	95801-06010-08	Flange Bolt 6x10	1	
28	95801-06012-08	Flange Bolt 6X12	2	
29	95801-06040-07	Flange Bolt 6*40	2	
30	95801-08012-08	Flange Bolt 8*12	3	
31	9621A-05000-00	STEEL BALL SET (# 5MM) 100Pcs	26	
32	9621A-08000-00	STEEL BALL 8 (100pcs/set)	19	

# F21 EXHAUST MUFFLER

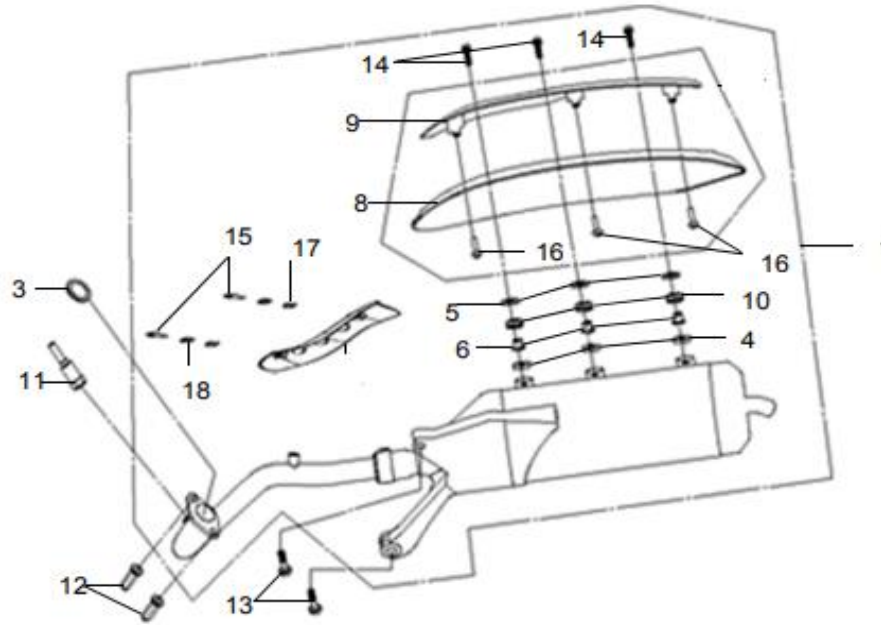

No.	Part No.	Description	Qty	Remark
1	18000-VJ3-0003	Exhaust Muffler Ass'y	1	provide while stock last
3	18291-M9Q-0000	Exhaust Pipe Gasket	1	
4	18292-F86-000	Protector Packing A	3	
5	18293-F3E-000	Protector Packing B	3	
6	18295-A1A-000	Collar M6	3	
8	18318-VJ3-0000	Muffler Protector A	1	
9	18319-VJ3-0000	Muffler Protector B	1	
10	18321-L1A-000	Protector Rubber	3	
11	37890-A5L-0002	O2 Sensor	1	
12	90043-HMA-0000-VN	Cap Nut 8mm	2	
13	90103-H6B-000	Flange Bolt 8*38	2	
14	93401-06022-07	Bolt-Washer 6*22	3	
16	93903-25280	Tapping Screw 5X12	3	
15	93500-05008-OA	Pan Screw 5*8	2	
16	93903-25280	Tapping Screw 5*12	3	
17	94101-05000	Plain Washer 5mm	2	
18	94111-05000	Spring Washer 5mm	2	
	18322-HLK-300	Muffler Gasket	1	